



www.ititimspec.nz

Installation Manual

Vertical Shiplap Cavity System



VC-TRP-IM-V5

****IMPORTANT****

This Installation Manual (IM) is specific to **THERMOFIXX230™ THERMALLY MODIFIED RADIATA PINE (TRP) and VERTICAL SHIPLAP cavity system (VC) profile only.**

Specific drawings in this Installation Manual can be found at the back.

There are 12 CertClad Installation Manuals in the following profiles and timber species. Profiles are Bevel Back, Rusticated and Vertical Shiplap. The timber species are Accoya, Western Red Cedar, Radiata Pine and Thermally Modified Radiata Pine.

CertClad is a certified installation system and supplied by ITI Timspec.

You can find these documents on our website <https://ititimspec.nz/Downloads/6733/>. If you have any questions, please feel free to contact us. Auckland office (09)620-0260 or technical@ititimspec.co.nz

CONTENTS

CONTENTS	2
1 SCOPE	4
1.1 INTENDED USE	5
1.2 VALIDITY	5
1.3 PERFORMANCE	5
1.4 LIFESPAN	5
2 HEALTH AND SAFETY	7
2.1 CUTTING OF TIMBER	7
2.2 COATING AND PRIMING	7
3 SITE PREPARATION	8
3.1 STRUCTURE AND FRAMING	8
3.2 BUILDING UNDERLAY	8
4 PRE-INSTALLATION	9
4.1 ON-SITE STORAGE AND HANDLING	9
4.2 DOCKING OUT DEFECTS	9
4.3 PRIMING AND SEALING	9
5 MATERIALS – CAVITY SYSTEM COMPONENTS	10
5.1 CAVITY SYSTEM COMPONENTS	10
5.2 TIMBER SPECIES: RADIATA PINE	10
5.3 RADIATA PINE VERTICAL SHIPLAP WEATHERBOARDS	10
5.4 FLASHINGS	11
5.5 NAILS	11
5.6 CAVITY BATTENS	11
6 MATERIALS – ACCOMPANYING ELEMENTS	12
6.1 ACCOMPANYING ELEMENTS	12
6.2 TIMBER FRAMING	12
6.3 BUILDING UNDERLAY	12
6.4 FLASHING TAPE	12
6.5 SEALANTS AND ADHESIVES	12
6.6 PEF ROD	12
6.7 METER BOX	13
6.8 INTERNAL LINING	13
7 INSTALLING CAVITY BATTENS	14
7.1 CAVITY CONSTRUCTION	14

8	FIXING DETAILS FOR WEATHERBOARD	15
8.1	INSTALLATION	15
9	INTER-STOREY CAVITY JUNCTION	16
9.1	DEFINITION	16
10	WITHIN-BOARD JOINS (SCARF JOINT)	17
10.1	LIMITATIONS	17
10.2	METHOD	17
11	SITE CLEAN-UP	18
11.1	UPON COMPLETION	18
12	ON-GOING MAINTENANCE	19
12.1	MAINTENANCE INTERVAL	19
12.2	MAINTENANCE REQUIREMENTS	19
13	CONSTRUCTION DETAILS	20
14	CONTACT	45

TABLE OF FIGURES

Figure 13. 1 VC 105 Fixing Details – Paint Finish	20
Figure 13. 2 VC 106 Fixing Details – Stain Finish	21
Figure 13. 3 VC 201 Window Head – Aluminium Joinery.....	22
Figure 13. 4 VC 202 Window Jamb – Aluminium Joinery	23
Figure 13. 5 VC 203 Window Sill – Aluminium Joinery	24
Figure 13. 6 VC 300 Internal Corner – 19X19mm Corner Moulding.....	25
Figure 13. 7 VC 301 Internal Corner – 40X40mm Corner Moulding.....	26
Figure 13. 8 VC 302 Internal Corner – Butted.....	27
Figure 13. 9 VC 401 Inter–Storey Cavity Junction	28
Figure 13. 10 VC 402 Within Board Joint – Scarf Joint.....	29
Figure 13. 11 VC 403 External Corner – Boxed	30
Figure 13. 12 VC 404 External Corner – P42 Corner Moulding	31
Figure 13. 13 VC 405 External Corner – Notched & Lapped.....	32
Figure 13. 14 VC 406 External Corner – P40 Corner Moulding	33
Figure 13. 15 VC 501 Base, Concrete Slab on Ground	34
Figure 13. 16 VC 502 Base of Wall – Timber Floor.....	35
Figure 13. 17 VC 503 Base, Cladding Finish Above Deck.....	36
Figure 13. 18 VC 601 Roof/ Wall Top Plate – Flat Soffit.....	37
Figure 13. 19 VC 602 Roof/ Wall Top Plate – No Soffit.....	38
Figure 13. 20 VC 701 Parapet Capping Expansion Joint	39
Figure 13. 21 VC 702 Balustrade, Intersection with Wall	40
Figure 13. 22 VC 801 Meter Box Head	41
Figure 13. 23 VC 802 Meter Box Jamb	42
Figure 13. 24 VC 803 Meter Box Sill	43
Figure 13. 25 VC 851 Pipe Penetration Detail.....	44

1 SCOPE

1.1 INTENDED USE

This Vertical Shiplap Weatherboard Cavity System has been designed for use as cladding for residential and light commercial buildings. It is suitable for buildings with a 'Risk Score' of 0 - 20 Calculated in accordance with New Zealand Building Code (NZBC) Clause E2/AS1 Table 1. and Wind Zones up to and including extra high.

1.2 VALIDITY

Certclad is only valid when all products in the weatherboard system are as listed in the product certificate and in this manual. This is to ensure that all products meet the requirements of Certclad and are installed in the correct manner.

1.3 PERFORMANCE

When installed and maintained as specified in this manual and the work is done by a qualified tradesman using accepted trade practices, it will meet the applicable sections of the following requirements of the NZBC (New Zealand Building Code):

- B1 Structure
- B2 Durability
- E2 External Moisture
- F2 Hazardous Building Materials.

1.4 LIFESPAN

1.4.1 SERVICEABLE LIFE

ITI Timspec Thermofixx 230 Radiata Pine is warranted for 15 years depending on coating selected.

This serviceable life is subject to the coating and maintenance requirements below. More *importantly*, some timber boards may require replacement over the lifetime of the cladding as part of normal maintenance.

1.4.2 COATING REQUIREMENTS

For thermally modified Thermofixx 230 Radiata Pine with a bandsawn face, all faces (hidden and exposed) must be paint or stain finished. If painted the boards must be pre-coated, consisting of two coats of an approved primer (and undercoat) and all exposed faces coated with a further two coats of a suitable exterior grade topcoat, refer to chapter 4.3 (Priming and Sealing, page 9) and 5.2.3 (Coating, page 10) for more detail.

If stained, then all faces, edges and ends must be coated with a minimum of two coats of a penetrating oil or stain. Ensure all cut ends, edges, and any exposed or bare timber is also sealed with a minimum of two coats of the specified oil or stain.

1.4.3 MAINTENANCE REQUIREMENTS

When a coating is applied, periodic maintenance and recoating is required to ensure the integrity of the coating is sustained. This will generally mean applying another exterior coat in accordance with coating manufacturers specification. This will vary depending on the coating used and the maintenance schedule as outlined by coating manufacturer. Periodic washing and maintenance of the boards will also be required.

This will also vary depending on coating applied, site location and exposure, and specific requirements from coating manufacturer.

Please refer to the On-Going Maintenance section 12 (page 19) for more information about the required maintenance.

2 HEALTH AND SAFETY

2.1 CUTTING OF TIMBER

Cutting of timber is to be done in a well-ventilated area and a suitable dust mask, eye protection, and ear protection must be worn.

2.2 COATING AND PRIMING

Coating and priming are to be done in a well-ventilated area, refer to the coating/primer supplier for all matters relating to health and safety. All relevant sections of AS/NZS 2311:2009 (Guide to the painting of buildings) and all the coating manufacturer's requirements must be adhered to.

Contact Information is technical@ititimspec.co.nz; (09) 620-0260 or www.ititimspec.nz

3 SITE PREPARATION

3.1 STRUCTURE AND FRAMING

3.1.1 NEW ZEALAND STANDARD 3604

Generally, the timber framing must comply with NZS 3604 (2011) (Timber-framed buildings), however, where specific engineering design is required, the framing shall be at least of equivalent stiffness as the framing provisions of NZS 3604 (2011).

3.1.2 LAYOUT

Studs must be spaced at a maximum of 600mm between centres. Dwangs (nogging) must be spaced at a minimum of 400mm and maximum of 480mm between centres. Studs and Dwangs must form a flush plane for cavity battens and weatherboards to be fixed to.

Additional framing may be required at soffits, corners, and penetrations such as window and door openings to support the installation of battens and flashings.

3.1.3 MOISTURE CONTENT

The optimum moisture content of Thermofixx 230 weatherboards is between 8 - 12%. The moisture content must not exceed 12% at the time of fixing as problems may occur with the coating adhesion and movement of the boards.

3.2 BUILDING UNDERLAY

3.2.1 MATERIAL

Building underlay and Rigid wall underlays must comply with properties stipulated in NZBC Clause E2/AS1 Table 23 (Properties of roof underlays and building underlays) or equivalent proof of compliance to NZBC.

3.2.2 INSTALLATION

Building underlay to be installed in accordance with underlay manufacturer's specification, and in accordance with conditions set out in NZBC Clause E2/AS1. 9.1.7.2.

4 PRE-INSTALLATION

4.1 ON-SITE STORAGE AND HANDLING

Care must be taken to ensure that timber and accessories are kept clean and dry and are not damaged whilst in storage awaiting application.

Extra care is to be taken while handling timber to ensure that it is not damaged.

Timber is to be stacked on flat level bearers/dunnage that is a maximum of 900mm apart and at least 100mm off the ground. Timber should either be stored inside an enclosed building or covered with an additional waterproof layer and protected from the elements when stored outside.

IMPORTANT Thermally modified Thermofixx 230 Radiata Pine weatherboards should not be installed if their moisture content is above 12%.

4.2 DOCKING OUT DEFECTS

Before coating or installing boards, check for any defects that may require docking out.

IMPORTANT All docked ends; edges and any exposed or bare timber will require end sealing with a minimum of two coats of primer or stain (depending on coating system specified).

4.3 PRIMING AND SEALING

Apply the first coat of primer to all sides and edges of the weatherboard prior to installation. It is critical that thermally modified radiata pine is at the correct moisture content prior to priming. Remember that all docked ends will require priming or sealing as noted above. Follow the coating manufacturer's directions and ensure further coats are applied as required. All relevant sections of standard AS/NZS 2311 (Guide to the painting of buildings) must be adhered to.

5 MATERIALS - CAVITY SYSTEM COMPONENTS

5.1 CAVITY SYSTEM COMPONENTS

All cavity system components must be supplied by or approved by ITI Timspec. This is to ensure that all items are up to a suitable standard and to ensure the compatibility and suitability of all items. Any alternative or competitor supplied product will invalidate the Certclad Warranty.

5.2 TIMBER SPECIES: RADIATA PINE THERMALLY MODIFIED

5.2.1 MATERIAL

New Zealand grown Radiata Pine (*Pinus Radiata*) which has been thermally modified in a patented thermal process to an equivalent minimum H3.1 level.

5.2.2 DURABILITY

ITI Timspec Thermofixx 230 Radiata Pine is warranted for 15 years depending on coating selected.

The above Warranty assumes regular maintenance. Please refer to the on-going Maintenance Section 12 for more information.

Please note, some timber boards may require replacement over the lifetime of the cladding as part of normal maintenance.

5.2.3 COATING

Dark colours attract more heat which will exacerbate any timber movement and/or resin bleed. Dark coatings are permitted on Thermofixx 230 weatherboards however, coatings which have an LRV (light reflectance value) of 45% or higher are recommended, to minimise movement within the board profile.

5.3 THERMALLY MODIFIED RADIATA PINE VERTICAL SHIPLAP WEATHERBOARDS

Thermofixx 230 Radiata Pine can be machined into a variety of profiles, including the range of Vertical Shiplap weatherboards as listed on our website.

5.3.1 COATING THERMALLY MODIFIED RADIATA PINE WEATHERBOARDS

Where a paint finish is specified, Thermofixx 230 Radiata Pine must be coated with two coats of primer and two further coats of a suitable alkyd or 100% acrylic paint. All relevant sections of standard AS/NZS 2311 (Guide to the painting of buildings) should be adhered to.

All cut ends or any exposed or bare timber must be coated with a minimum of two coats of primer before installation. Immediately after fixing the weatherboards, all nail holes should be spot-primed and filled and sanded smooth, prior to painting.

As soon as possible after fixing the weatherboards, they should be over-coated with a minimum of two coats of suitable exterior grade premium paint. Follow the paint manufacturer's directions specification.

If the weatherboard has been exposed to the elements for an extended period (generally 4 weeks) or if there is evidence of the primer "chalking", then re-priming will be necessary. This involves sanding the primer back to a sound surface and re-priming using a premium oil-based primer such as Resene True-Prime or Dulux Ultra-Prime.

Where a stain finish is specified, the boards must be pre-coated on all faces, edges, and ends to ensure board is envelope sealed. A further coat of the specified oil or stain to be applied to all exposed faces once installed.

It is recommended that the boards are pre-coated via an in-line factory coating system prior to delivery to ensure correct sealing of the boards. This applies to both paint priming and oil or stain coating.

5.4 FLASHINGS

5.4.1 MATERIAL

Flashings can be either, powder coated or mill finish aluminium, stainless steel (304, 316), or uPVC.

All flashings to comply with NZBC Clause E2/AS1. 4.0 and Table 7.

See also ITI Timspec construction details for specific flashing sizes and covers.

IMPORTANT Weatherboard fixings are not to penetrate flashings as this may provide a path for water to track through.

5.5 NAILS

5.5.1 MATERIAL

Nails shall be Stainless Steel (304) or in sea spray or corrosion zones, 316 Stainless Steel.

5.6 CAVITY BATTENS

5.6.1 MATERIAL

Minimum H3.1 treated Radiata Pine, or Polypropylene (Cavibat).

5.6.2 DIMENSIONS

Battens are 45 x 18 mm.

Cavibat battens have been appraised by BRANZ as a non-structural batten for wall cladding systems.

Refer to E2/AS1 – Section 9.1.8.4

Refer to BRANZ Appraisal No. 524 [2007] for information about Cavibat, including its limitations and specifications.

6 MATERIALS - ACCOMPANYING ELEMENTS

6.1 ACCOMPANYING ELEMENTS

All items that precede the installation of the weatherboard system (building underlay, roofing underlay, flashing tape, etc.) and all consumables and items successive to the weatherboard system (PEF backing rods, flexible sealants, etc.) are not supplied by ITI Timspec as these are outside the scope of this specification. These items still require careful evaluation to determine their suitability and still play a critical role as part of the cladding system.

IMPORTANT It is the builder's responsibility to ensure that all these accompanying items meet the requirements and properties stated and more *importantly* are compatible with adjacent materials and are fit for the intended purpose and comply with the relevant clauses of the NZBC.

6.2 TIMBER FRAMING

Timber framing must meet the requirements of NZS 3604 (2011) (Timber-framed buildings), or where an alternative framing product is used (such as steel framing) strength and stiffness must be equal or greater than the performance requirements as set out in NZS 3604 (2011).

6.3 BUILDING UNDERLAY

The building underlay used must also meet all the requirements stated in NZBC Clause E2/AS1 Table 23 (Properties of roof underlays and Wall Underlays). ITI Timspec recommends Pro Clima Solitex Extasana.

A Rigid Wall Underlay is required for EH wind zones.

6.4 FLASHING TAPE

The flashing tape used must meet all the requirements stated in NZBC Clause E2/AS1 section 4.3.11 with a valid BRANZ Appraisal or similar certification and suitable to be used with the wall underlay selected.

The flashing tape must be compatible with all materials that it is in contact with, specifically the building underlay.

6.5 SEALANTS AND ADHESIVES

6.5.1 MODIFIED SILICONE OR CO-POLYMER CONSTRUCTION SEALANT

All construction Sealants are to be a modified silicone. ITI Timspec recommends Sikaflex AT Façade.

6.5.2 SELF-EXPANDING POLYURETHANE FOAM

All Self-expanding foams must be rapidly expanding polyurethane foams that bonds with all materials that they will come into contact with. The foams must not shrink and must cure to an airtight, moisture resistant seal.

6.6 PEF ROD

PEF backing rod must be closed cell polyethylene foam complying with E1/AS1 section 9.1.6.

It should have a diameter 25% larger than the gap width and should be pushed into the gap with a blunt tool.

6.7 METER BOX

Meter box penetrations have a higher risk of water ingress, and as such all possible steps should be taken to minimise this risk. A good quality meter box manufactured by a leading NZ supplier will certainly help this.

Meter boxes are to be manufactured from aluminium, hot-dipped galvanised steel, glass-reinforced plastic or other suitable rigid, UV resistant, non-combustible material. They also must be coated on the inside and outside surfaces with a material giving a hard, durable finish providing a service life of not less than 20 years.

The door must have a troughed lip around the front perimeter and if a drain is present, it should be made in a way to minimise water entry.

6.8 INTERNAL LINING

Internal Linings must be of a suitable size and material to provide bracing where needed and to act as an adequate barrier to air flow.

7 INSTALLING CAVITY BATTENS

7.1 CAVITY CONSTRUCTION

7.1.1 COMPLIANCE

Cavities must comply with NZBC Clause E2/AS1 paragraphs 9.1.8 to 9.1.9.4.

7.1.2 PRECAUTIONS

As solvents in LOSP treatments of timber cavity battens can affect bitumen-based building papers, it is necessary to fillet stack LOSP treated timber for 7 days after treatment to ensure that solvent has evaporated before contact with any bitumen-based building paper.

7.1.3 FIXING (NON-STRUCTURAL) CAVITY BATTENS

Cavity battens are to be fixed over the building underlay to the framing. Castellated pine battens are fixed over horizontal noggs or dwangs at minimum 400mm and maximum 480mm centres.

NOTE Fixing is only temporary for cavity battens as the weatherboard fasteners are used to permanently fix the batten.

7.1.4 TOP OF WALL DETAIL

No ventilation shall be provided at the top of the cavity. Use a horizontal D4S profile (not a Cavibat batten) at the top of the wall to close off the top of the cavity. This prevents damp air circulating from the cavity space into interior spaces such as roof framing or eaves and is extremely *important* where the cavity finishes beneath an area that is open to a roof space (such as a wall finishing under a soffit).

7.1.5 BOTTOM OF WALL DETAIL

Use a 'Cavity Base Closure Flashing' at the bottom of the wall to allow drainage and ventilation but prevent the entry of vermin. This also applies where cavities end over a window, door, or another opening. Ensure building underlay laps over rear upstand of the cavity base closure or use flashing tape to seal the top of the cavity base closure to the building underlay.

8 FIXING DETAILS FOR WEATHERBOARD

8.1 INSTALLATION

8.1.1 FIXING METHOD - VERTICAL SHIPLAP

Ensure correct nails are selected in accordance with the nail selection chart 8.1.2. below.

Nail placement is to be maximum 10mm in from the side of the rebate (35mm from the edge of weatherboard). The nail must not penetrate the underlapping (lower) board. Where the weatherboard profile has a centre groove close to the lap, the nail may be only 5mm in from the side lap (30mm in from edge of weatherboard). Nail shank must be annular grooved.

Pre-drill all nail holes using a bit that is 0.3 – 0.5mm smaller than the nail shank to prevent splitting and ensure a snug fit.

Nail on a slight upward angle to prevent water running down the nail through the cavity.

Ensure nail shank has a minimum framing penetration of 35mm for painted weatherboards, and a minimum 30mm framing penetration for stained weatherboards.

Hand-drive all nails. Gun-driven nails should not be used as they may damage the surface of the timber or rear face to the profile, or cause splitting or crushing damage in the battens.

Flat head, pentagon head or rose head nails to finish flush onto, but not into, the face of the weatherboard.

Jolt head nails (for paint finish only) must be punched just below the surface, spot primed and filled using a two-part high quality non-shrinking filler and sanded smooth prior to painting.

Ensure weatherboards are set out to achieve correct 25mm overlap at join, and a 1-2mm expansion gap between boards at rear of profiles.

One board on any given wall elevation may need to be cut down to fit wall width. Do not extend or reduce the 25mm lap requirement or ‘creep’ the boards to fit.

8.1.2 NAIL SELECTION CHART (NON STRUCTIURAL 20MM CAVITY)

Weatherboards	Nail Size	Material	Nail Head	Nail Shank	Minimum Framing Penetration
Painted	75 x 3.25mm	Stainless Steel (304 or 316) Silicon Bronze	Jolt, rose, flat or pentagon head	Annular grooved	To achieve minimum 35mm framing penetration
Stained	75 x 3.25mm	Stainless steel (304 or 316)	Flat, rose, pentagon head	Annular grooved	To achieve minimum 30mm framing penetration

Refer NZBC Clause E2AS1 Table 24

Fixing lengths need to increase when installed over a rigid wall underlay to ensure minimum penetration of fixing into the stud. Ensure correct nail type for the specific corrosion zone of site.

9 INTER-STOREY CAVITY JUNCTION

9.1 DEFINITION

Cavities may be continuous up to two storeys or 7m in height (whichever is the lesser). Walls over this height require an inter-storey junction to drain the cavity.

10 WITHIN-BOARD JOINS (SCARF JOINT)

Use a within-board join to join two shorter weatherboards together, to cover full wall height.

10.1 LIMITATIONS

A within-board join should not be placed where it is directly adjacent to another join, a junction, or a penetration i.e., stagger joins across the wall.

10.2 METHOD

Weatherboards may be joined by scarfing two boards together over a batten. Cut boards with a minimum 30-degree angle. Use an appropriate adhesive to bond the boards together and nail through the top overlapping board only. The nail should be 30mm from the edge of the join to avoid hitting the underlapping board. Care should be taken to select and use two boards that are similar in grain and appearance, and that have equal moisture contents; otherwise, one board may shrink or expand at a differing rate putting stress on the joint. Ensure exposed cut end grain is fully sealed to prevent moisture ingress.

11 SITE CLEAN-UP

11.1 UPON COMPLETION

Upon completion, the installer is to leave the site in a clean and tidy manner, including:

1. Replacing or repairing any damaged or marked items; and
2. Removing all rubbish, debris, and unused items from the building site.

Any treated and/or coated timber off-cuts (e.g., cavity battens) or rubbish are to be disposed of in accordance with local council requirements.

12 ON-GOING MAINTENANCE

It is the building owner's responsibility to ensure that the cladding system receives regular maintenance so that it continues to perform at its required level.

12.1 MAINTENANCE INTERVAL

Maintenance should be called up at least annually, and more often in aggressive environments – coastal, industrial, and geothermal as appropriate.


12.2 MAINTENANCE REQUIREMENTS

Regular maintenance is to include the following 5 steps:

1. Wash all exterior surfaces with low-pressure water to remove dust, dirt, and other airborne or organic contaminants.
 - a. Extra attention should be given to areas that are not exposed to rain such as sheltered areas below eaves.
 - b. Do not direct high-pressure water at any part of the cladding system as this may damage the timber surface. Take care especially around sensitive junctions such as joinery surrounds and other flashings where you must avoid forcing water past anti-capillary gaps and flashings into the wall cavity.
2. Use a soft bristle nylon brush or broom with water and an appropriate cleaning agent (refer to coating manufacturer for correct cleaning agent specific to their coating system) to remove stubborn or persistent dirt and surface contaminants. Rinse thoroughly with water after the cleaning operation to remove any excess cleaning detergents. **DO NOT** use aggressive cleaning chemicals.
3. Inspect all surfaces and junctions for signs of damage, wear-and-tear, or coating breakdown. Where coating surface has broken or eroded, remedial action is required in accordance with the requirements of the coating manufacturer.
4. Repairing or replacing any damaged or deteriorated items to preserve the weather tightness of the building:
 - a. Small, isolated areas of dry rot (highly unlikely) in timber can be cut out and filled then primed and coated.
 - b. For larger areas of deterioration: remove and replace either the damaged section or the entire board for any deteriorated timber boards (includes scribes, cover boards and weatherboards). Prime and coat the replacements as required.
 - c. Other items (soakers, flashings, and capping's) may need to be replaced in their entirety.
5. Where a coating is applied, periodic recoating is required to ensure the integrity of the coating is sustained. This will generally mean applying another exterior coat every 4 to 10 years (dependent on the coating used and building location) after washing and maintenance. All recoating to be in accordance with the coating manufacturers schedule, and requirements.


13 CONSTRUCTION DETAILS

Figure 13. 1 VC 105 Fixing Details – Paint Finish

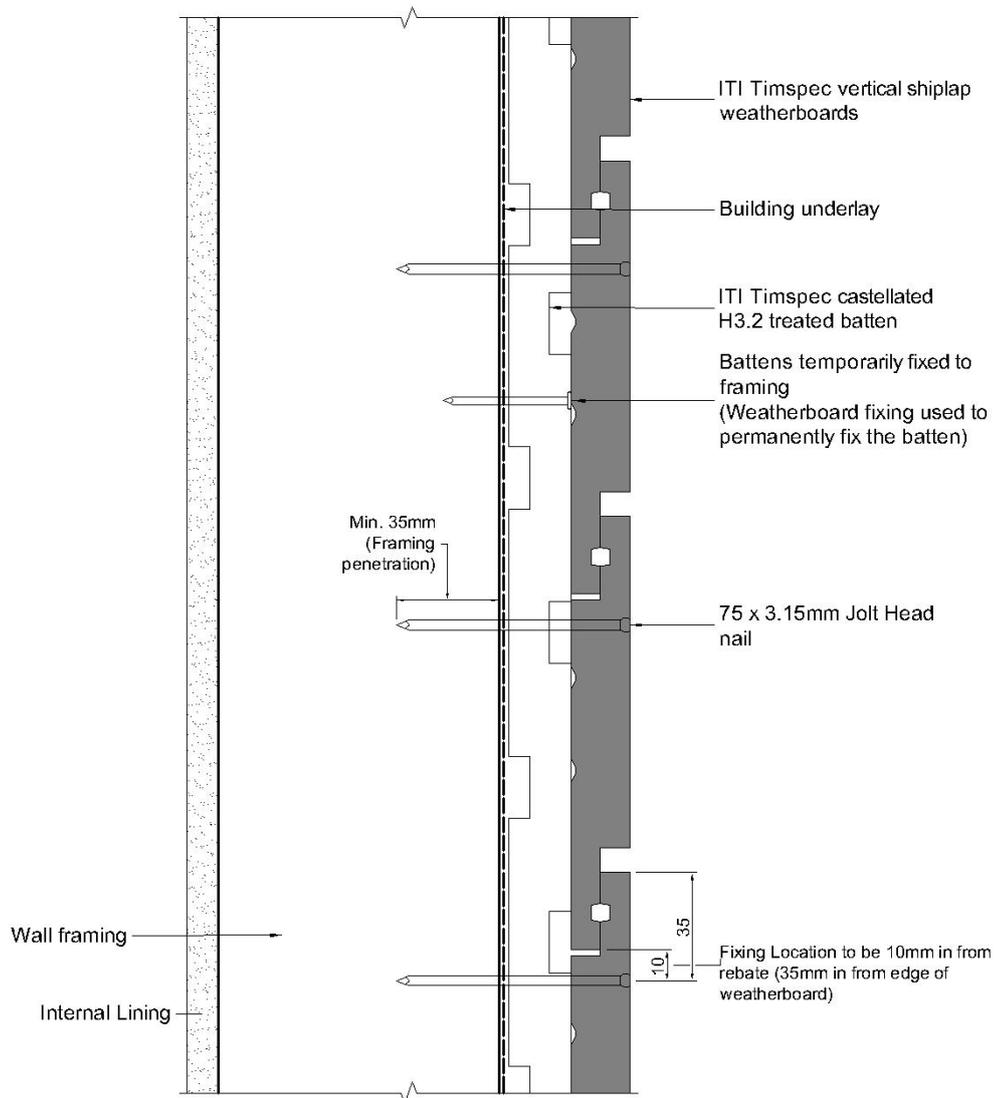


VC 105 Fixing Details – Paint Finish

Figure 13. 2 VC 106 Fixing Details – Stain Finish

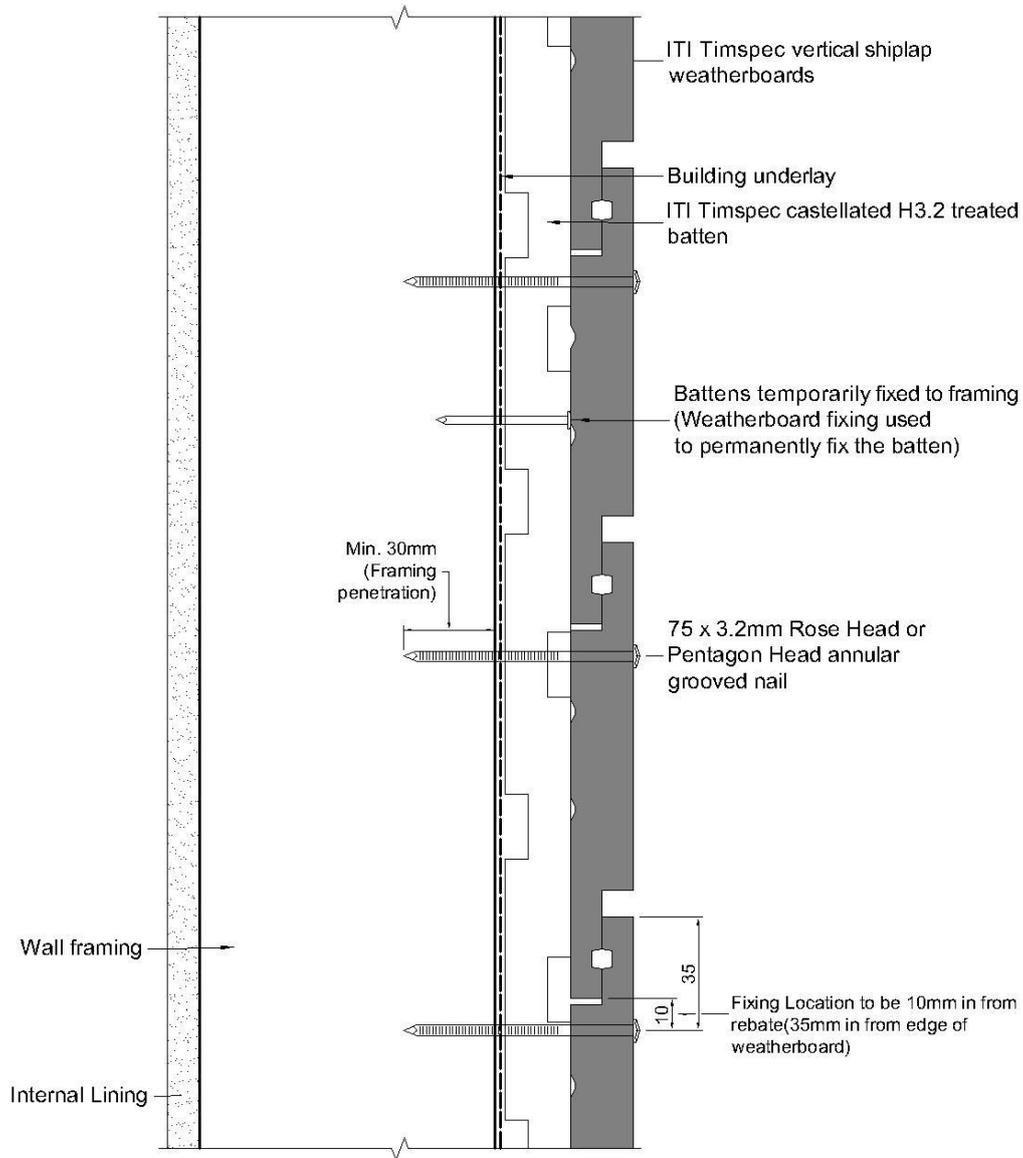

VC 106 Fixing Details – Stain Finish


Figure 13. 3 VC 201 Window Head – Aluminium Joinery

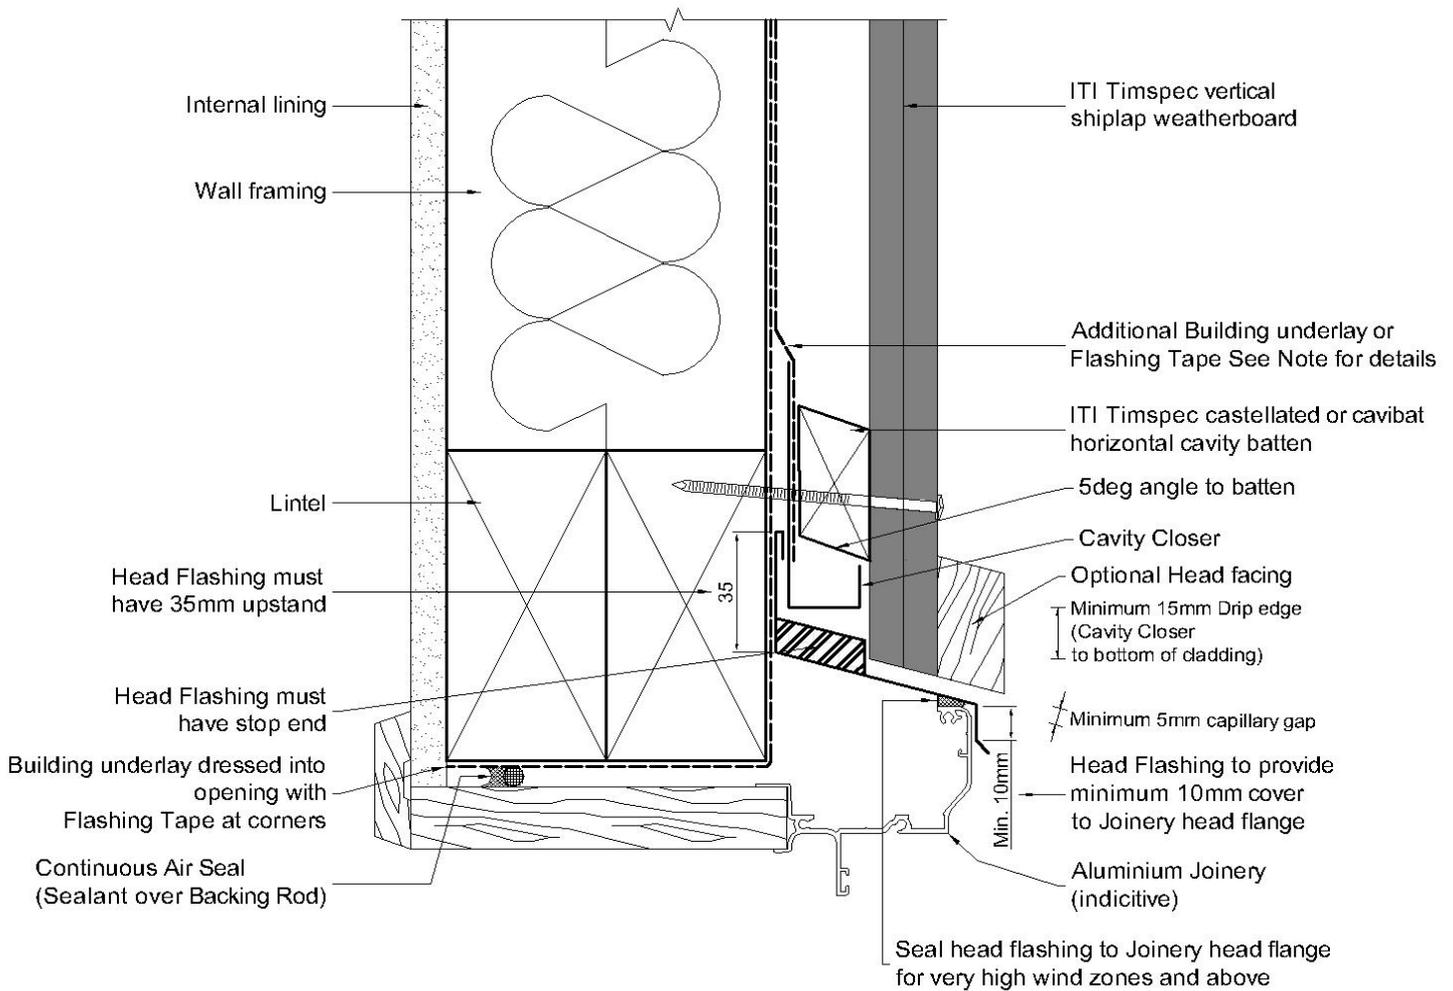

Note: Additional Building underlay to extend up wall to nearest lap above and extend down as far as possible into Cavity Closer.
 Alternatively Flashing Tape to extend up wall a minimum of 50mm above Cavity Closer and extend down as far as possible into Cavity Closer.


VC 201 Window Head – Aluminium Joinery

Figure 13. 4 VC 202 Window Jamb – Aluminium Joinery

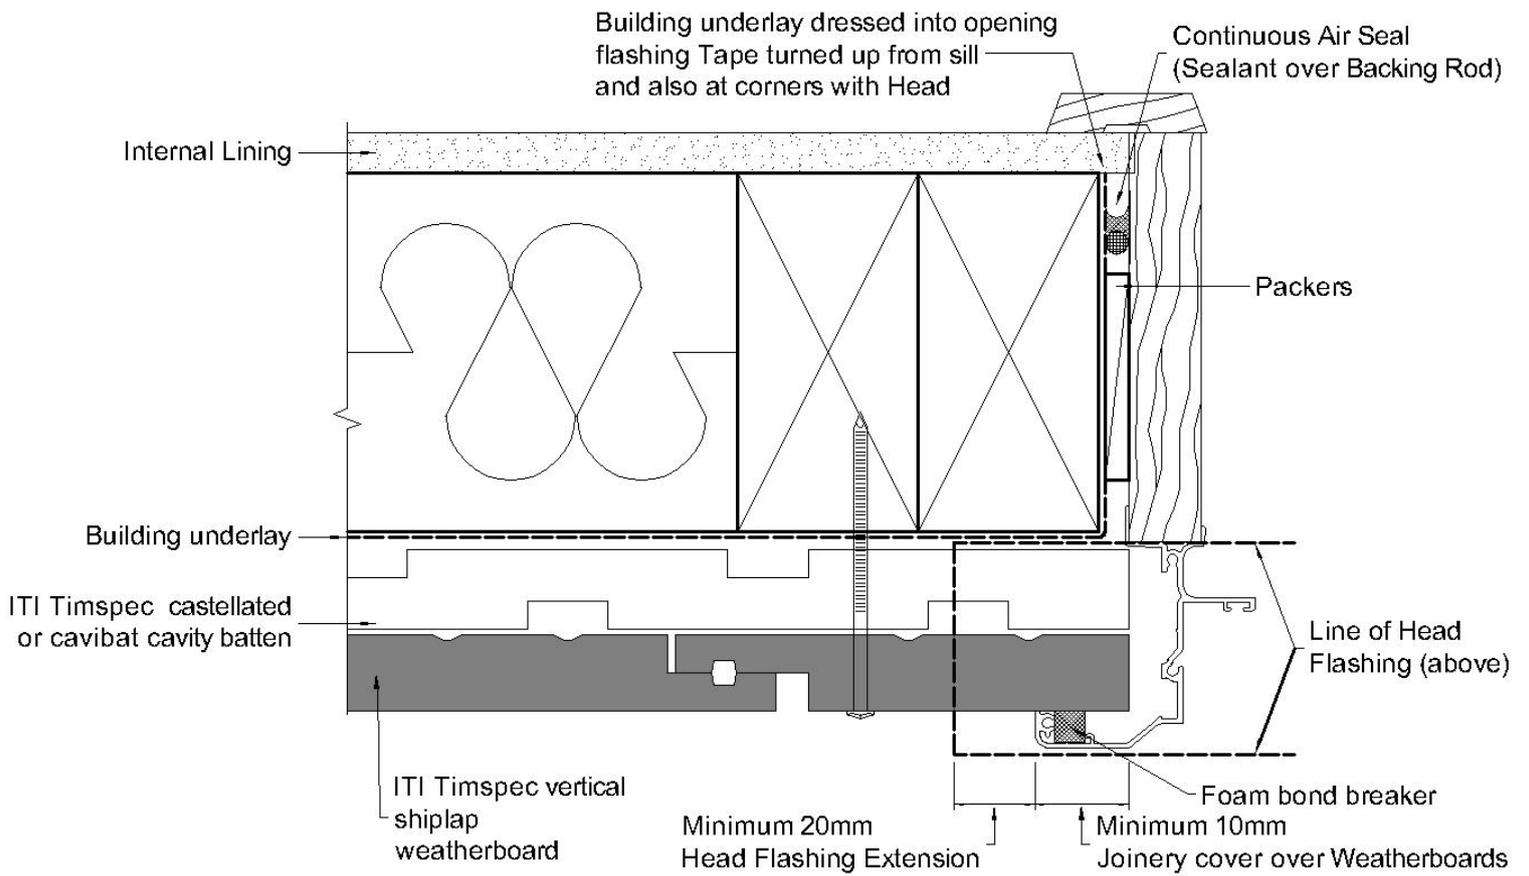


VC 202 Window Jamb – Aluminium Joinery

Figure 13. 5 VC 203 Window Sill – Aluminium Joinery

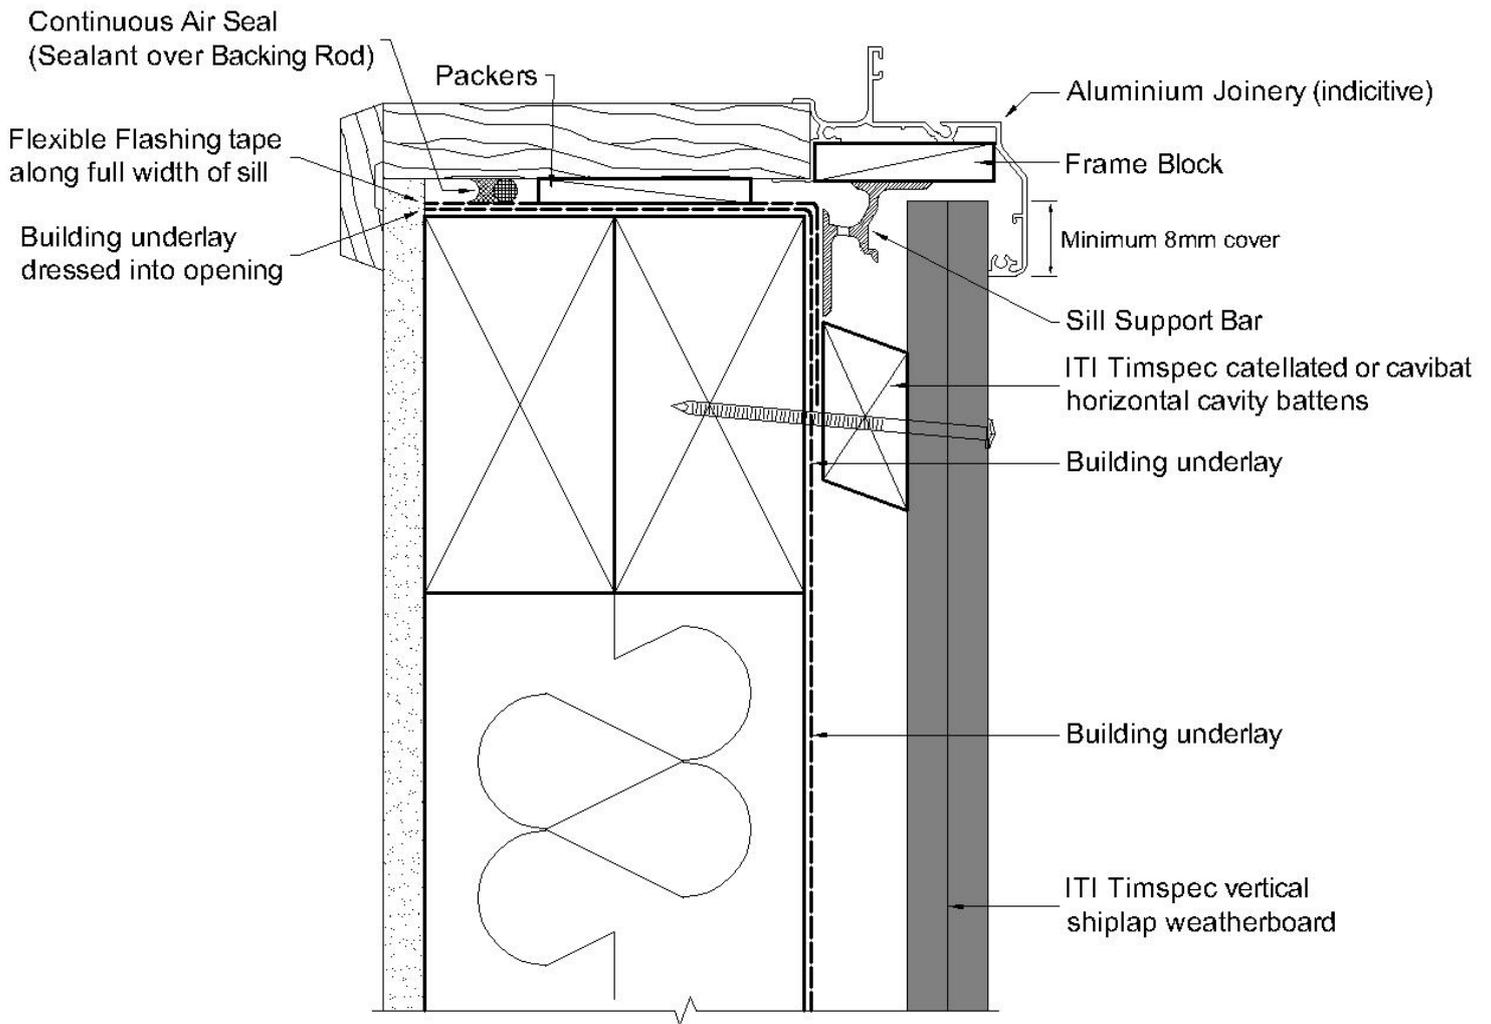


VC 203 Window Sill – Aluminium Joinery

Figure 13. 6 VC 300 Internal Corner – 19X19mm Corner Moulding

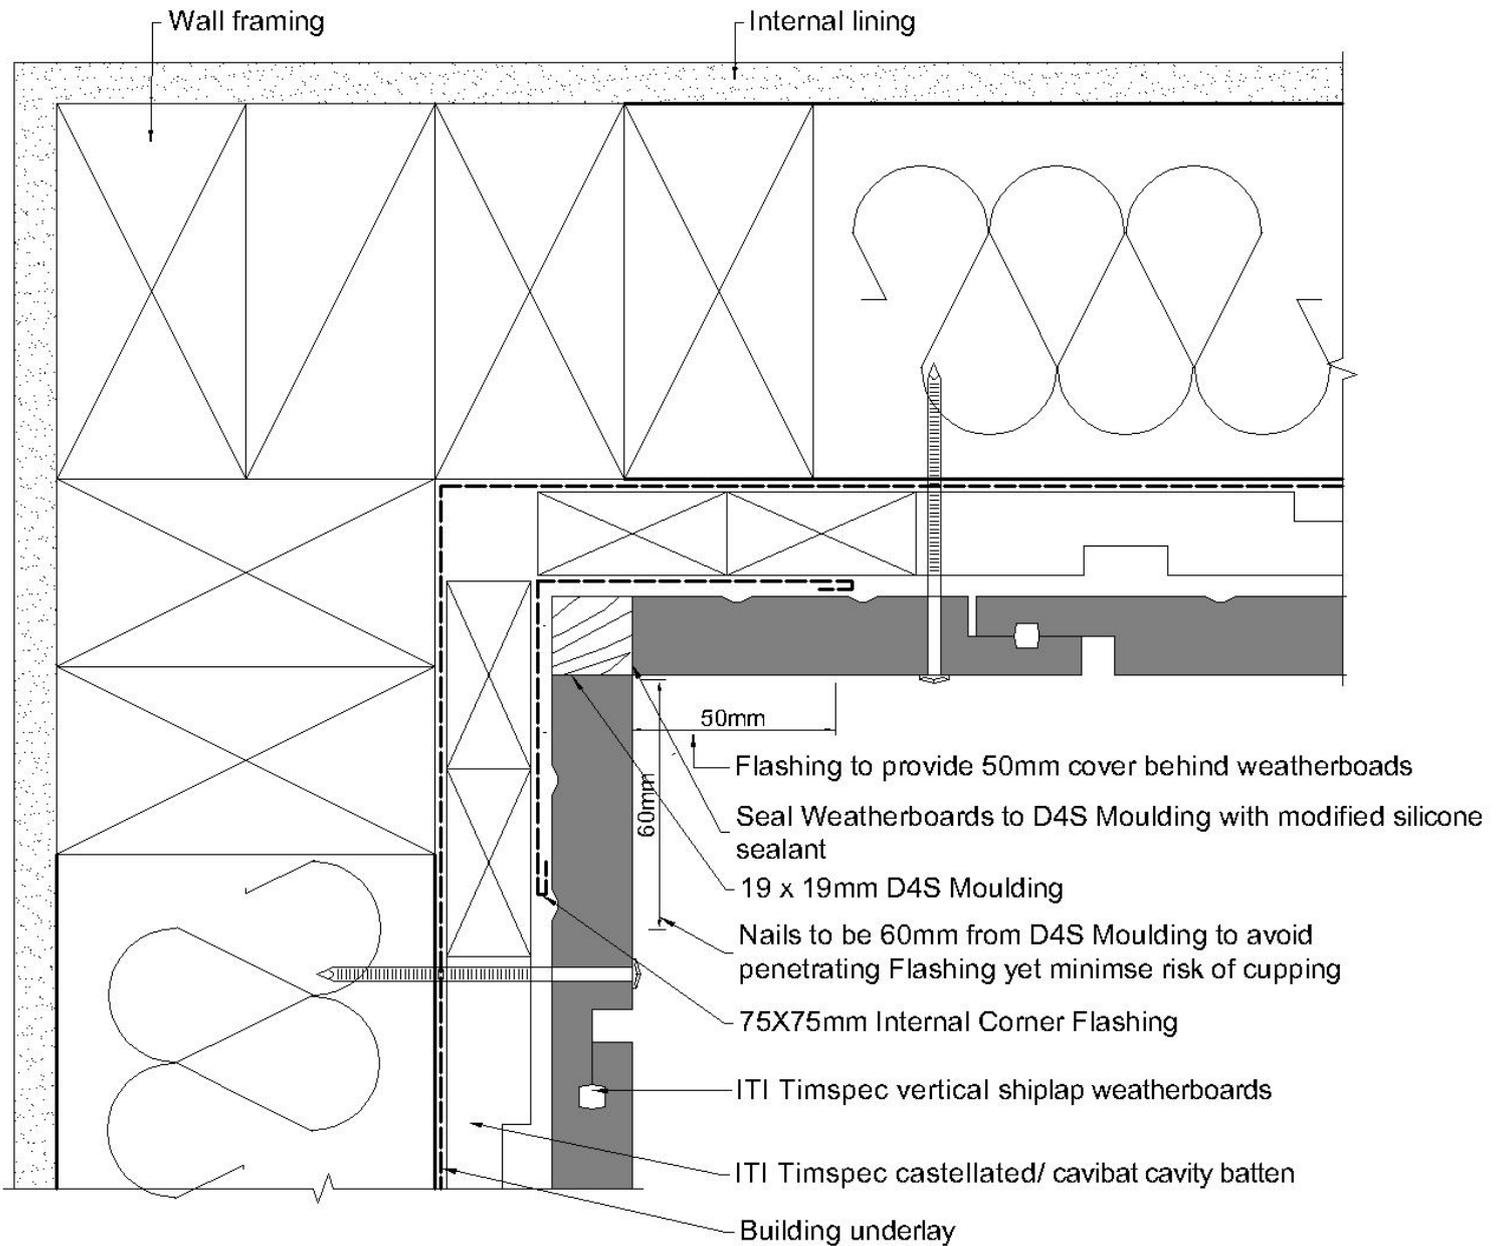


VC 300 Internal Corner - 19X19mm Corner Moulding

Figure 13. 7 VC 301 Internal Corner – 40X40mm Corner Moulding

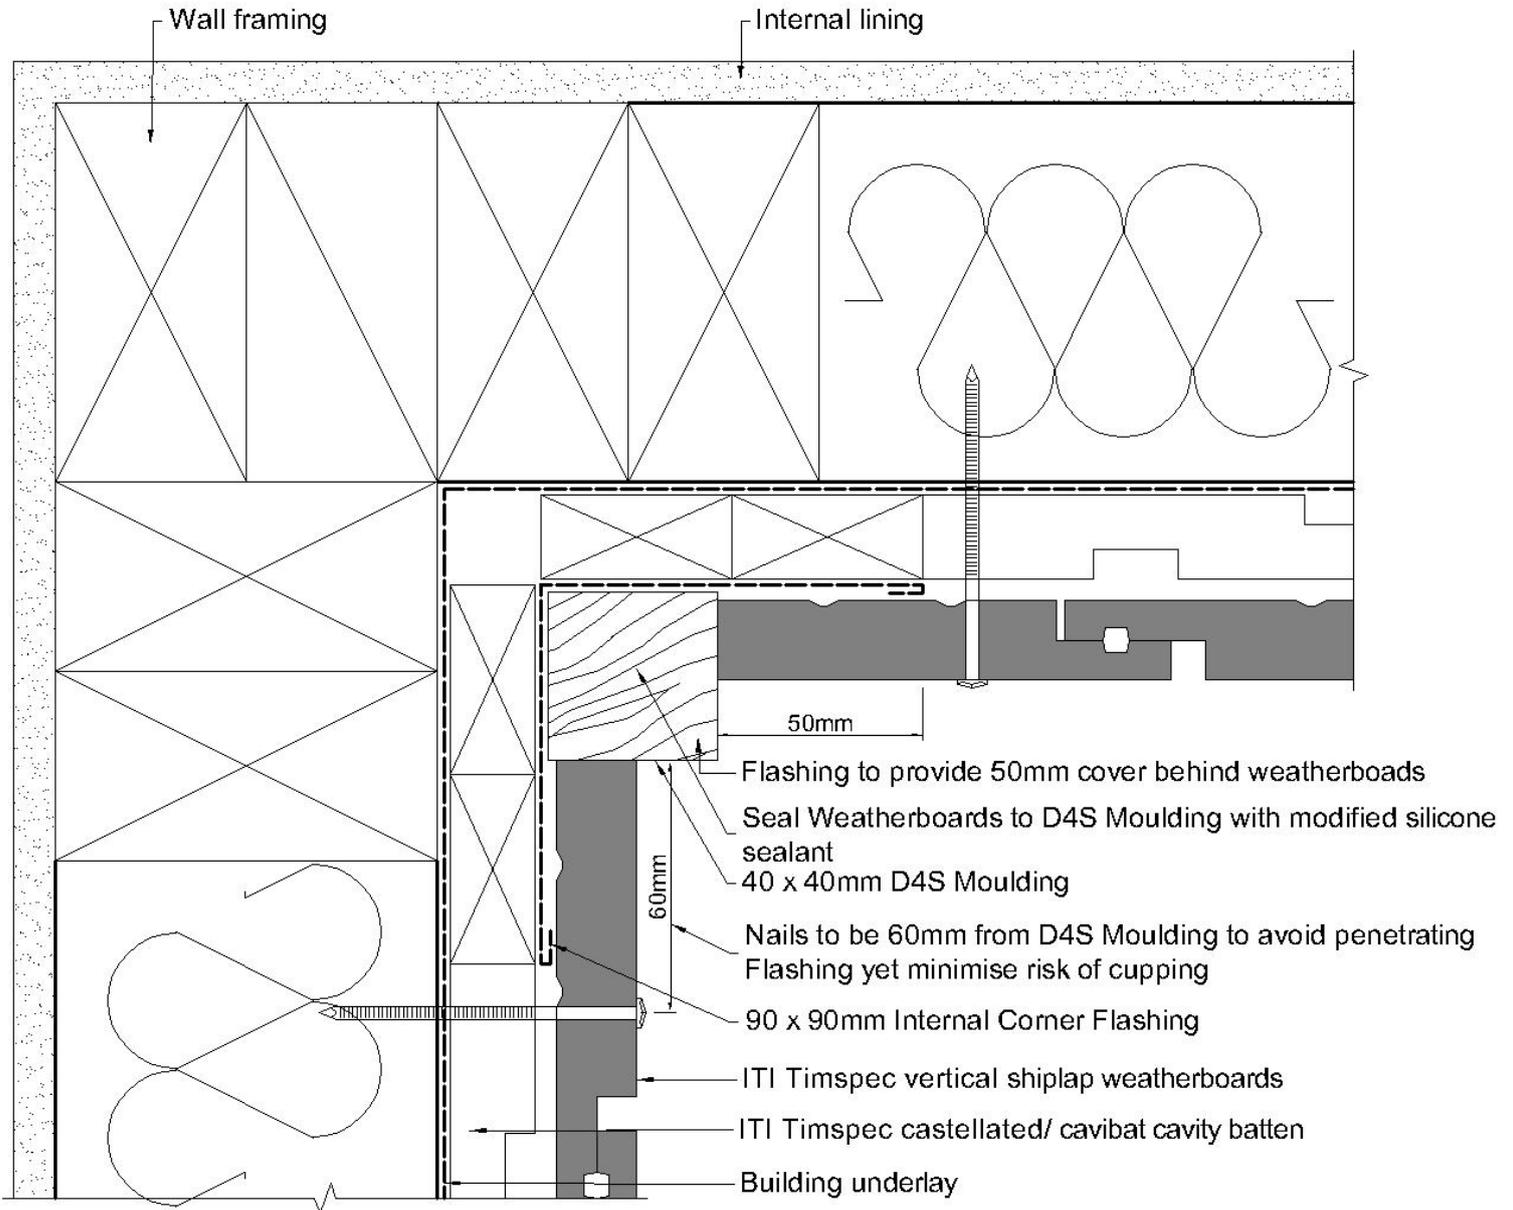


VC 301 Internal Corner – 40X40mm Corner Moulding

Figure 13. 8 VC 302 Internal Corner – Butted

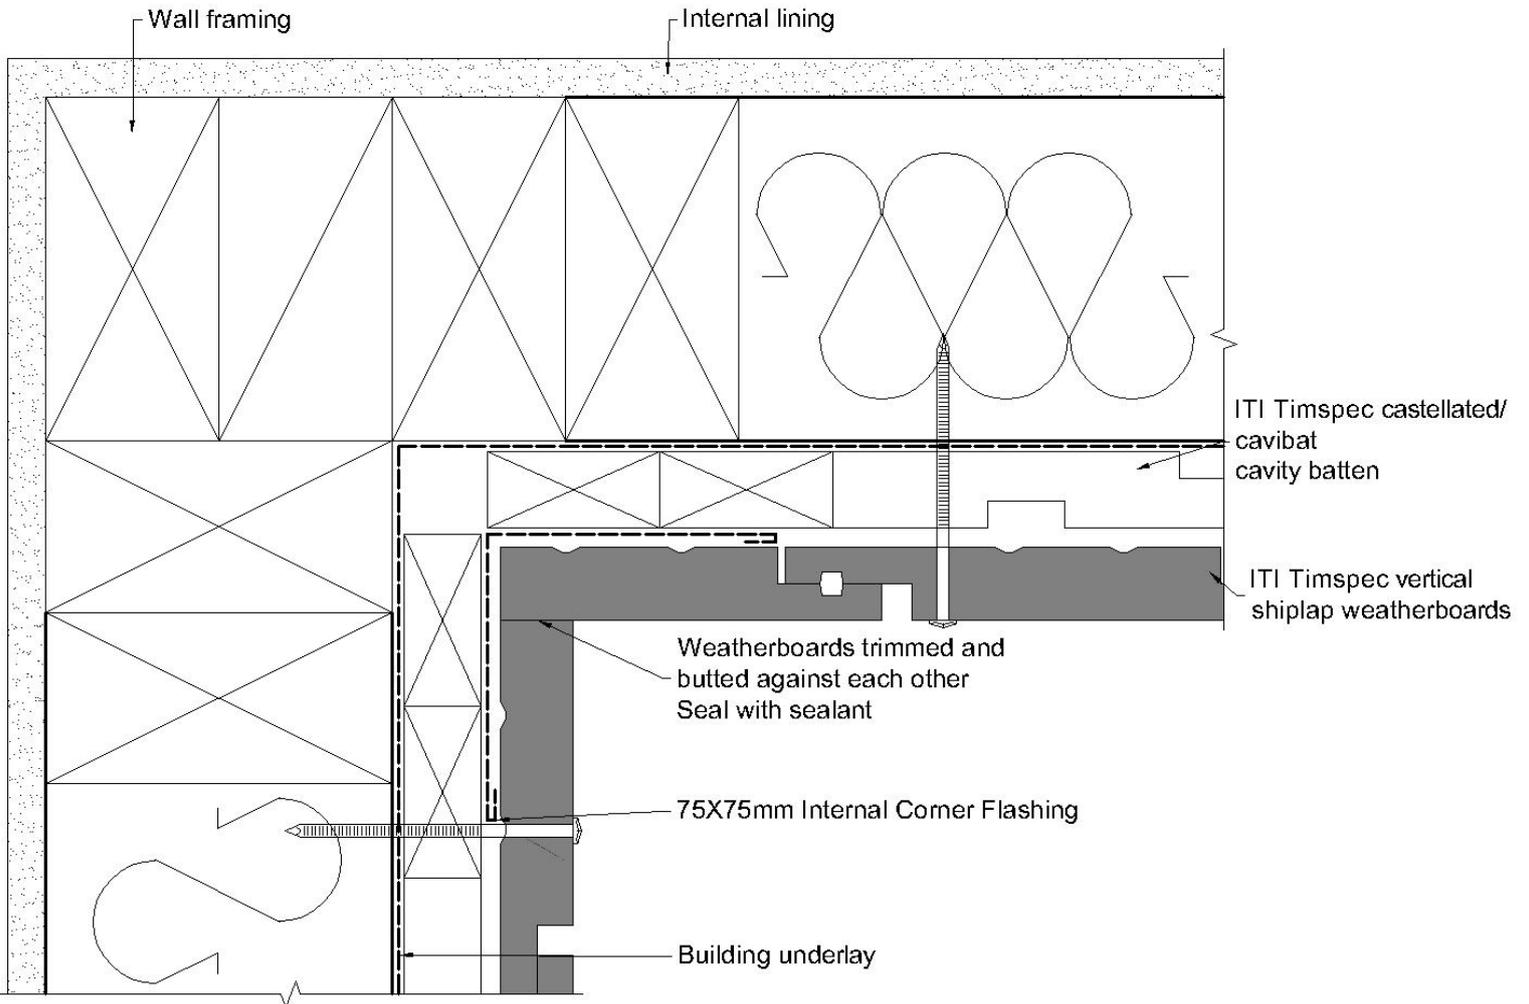


VC 302 Internal Corner – Butted

Figure 13. 9 VC 401 Inter-Storey Cavity Junction

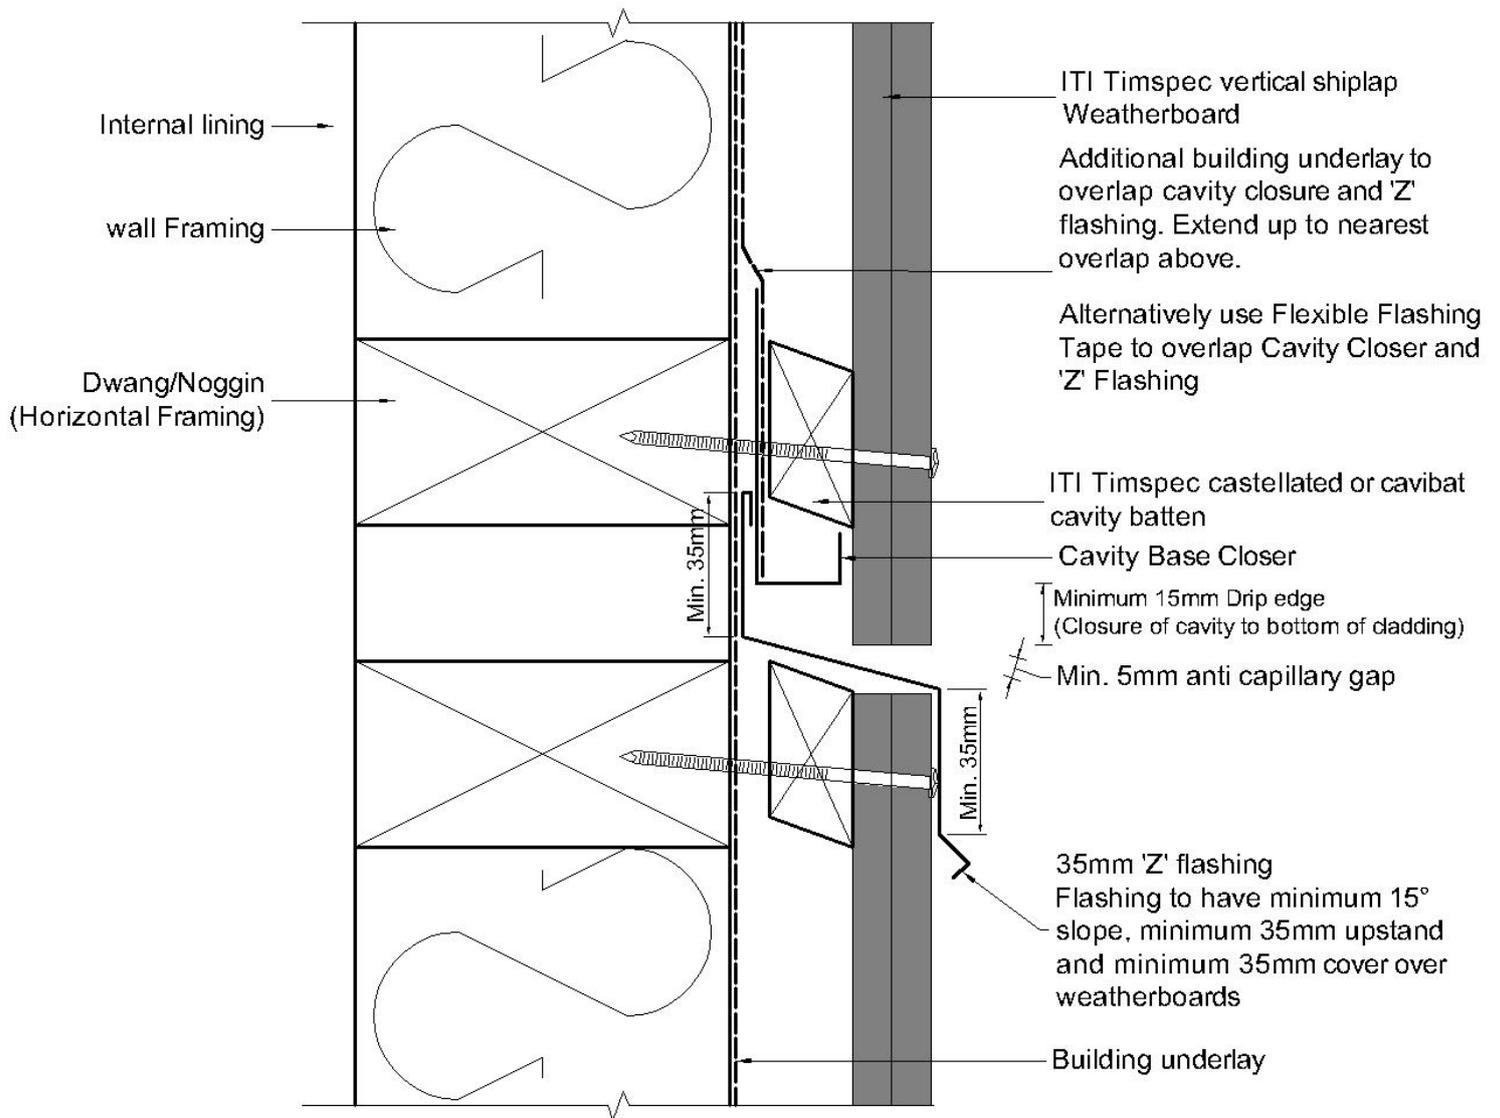


VC 401 Inter-Storey Cavity Junction

Figure 13. 10 VC 402 Within Board Joint – Scarf Joint

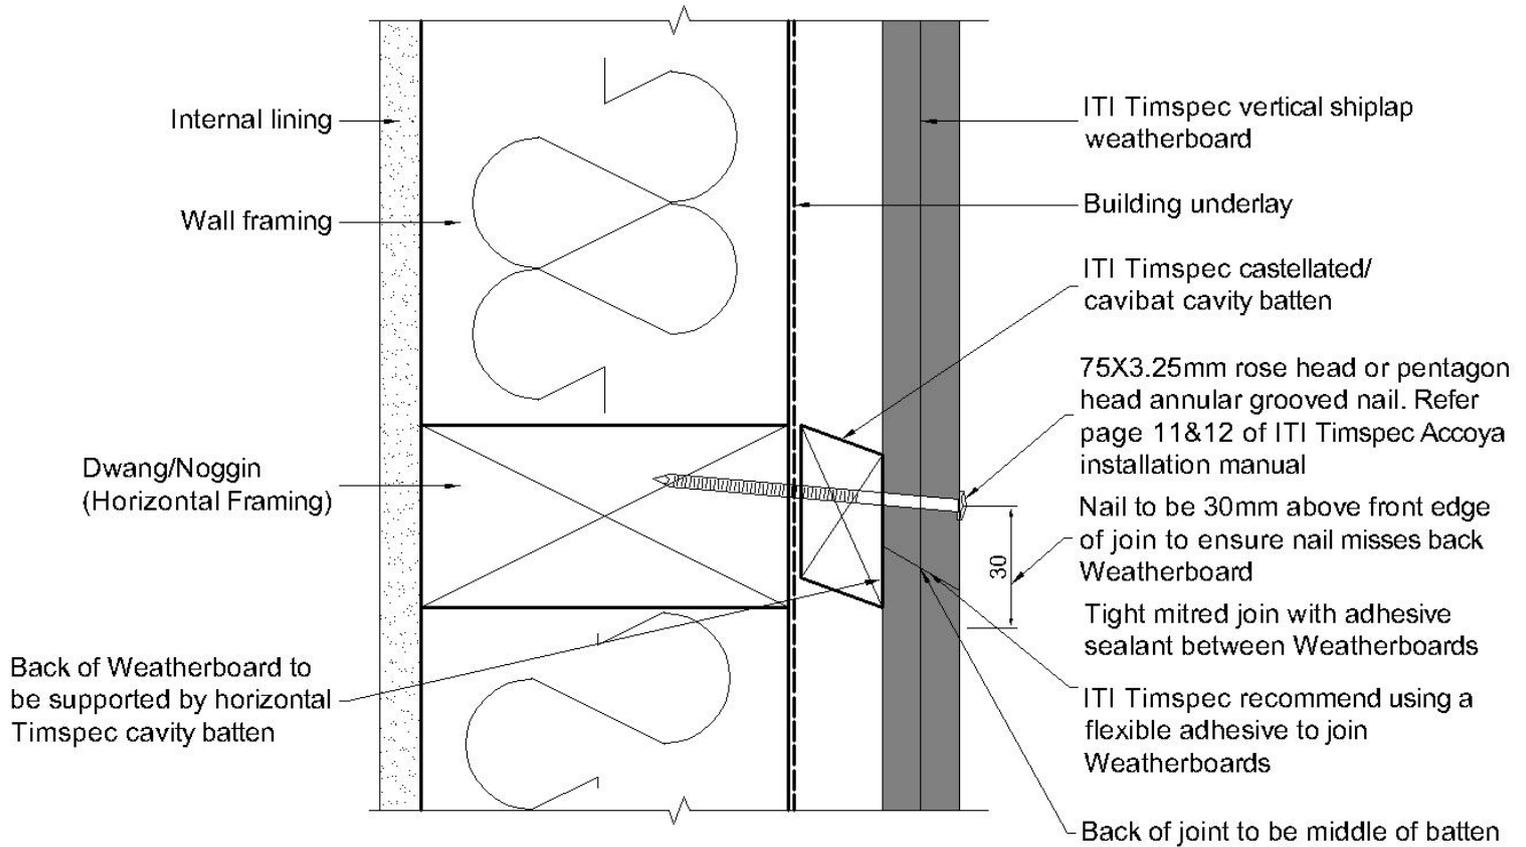


VC 402 Within Board Joint – Scarf Joint

Figure 13. 11 VC 403 External Corner – Boxed

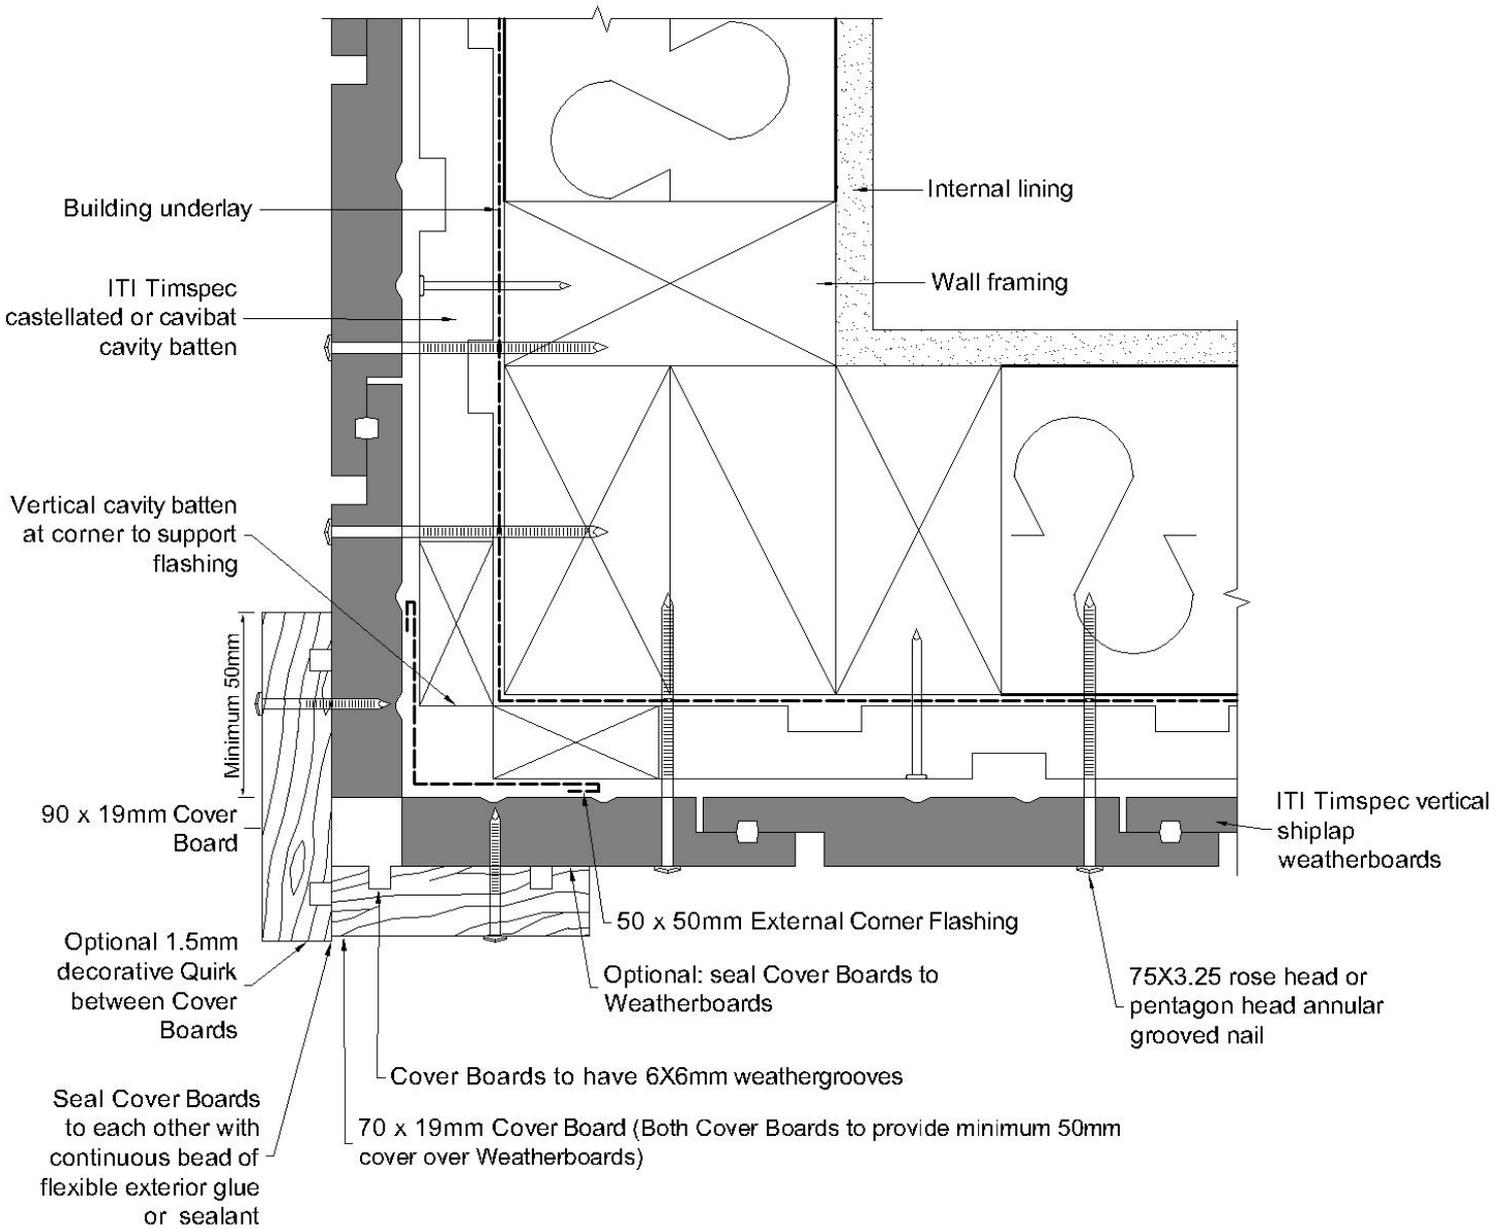


VC 403 External Corner – Boxed

Figure 13. 12 VC 404 External Corner – P42 Corner Moulding

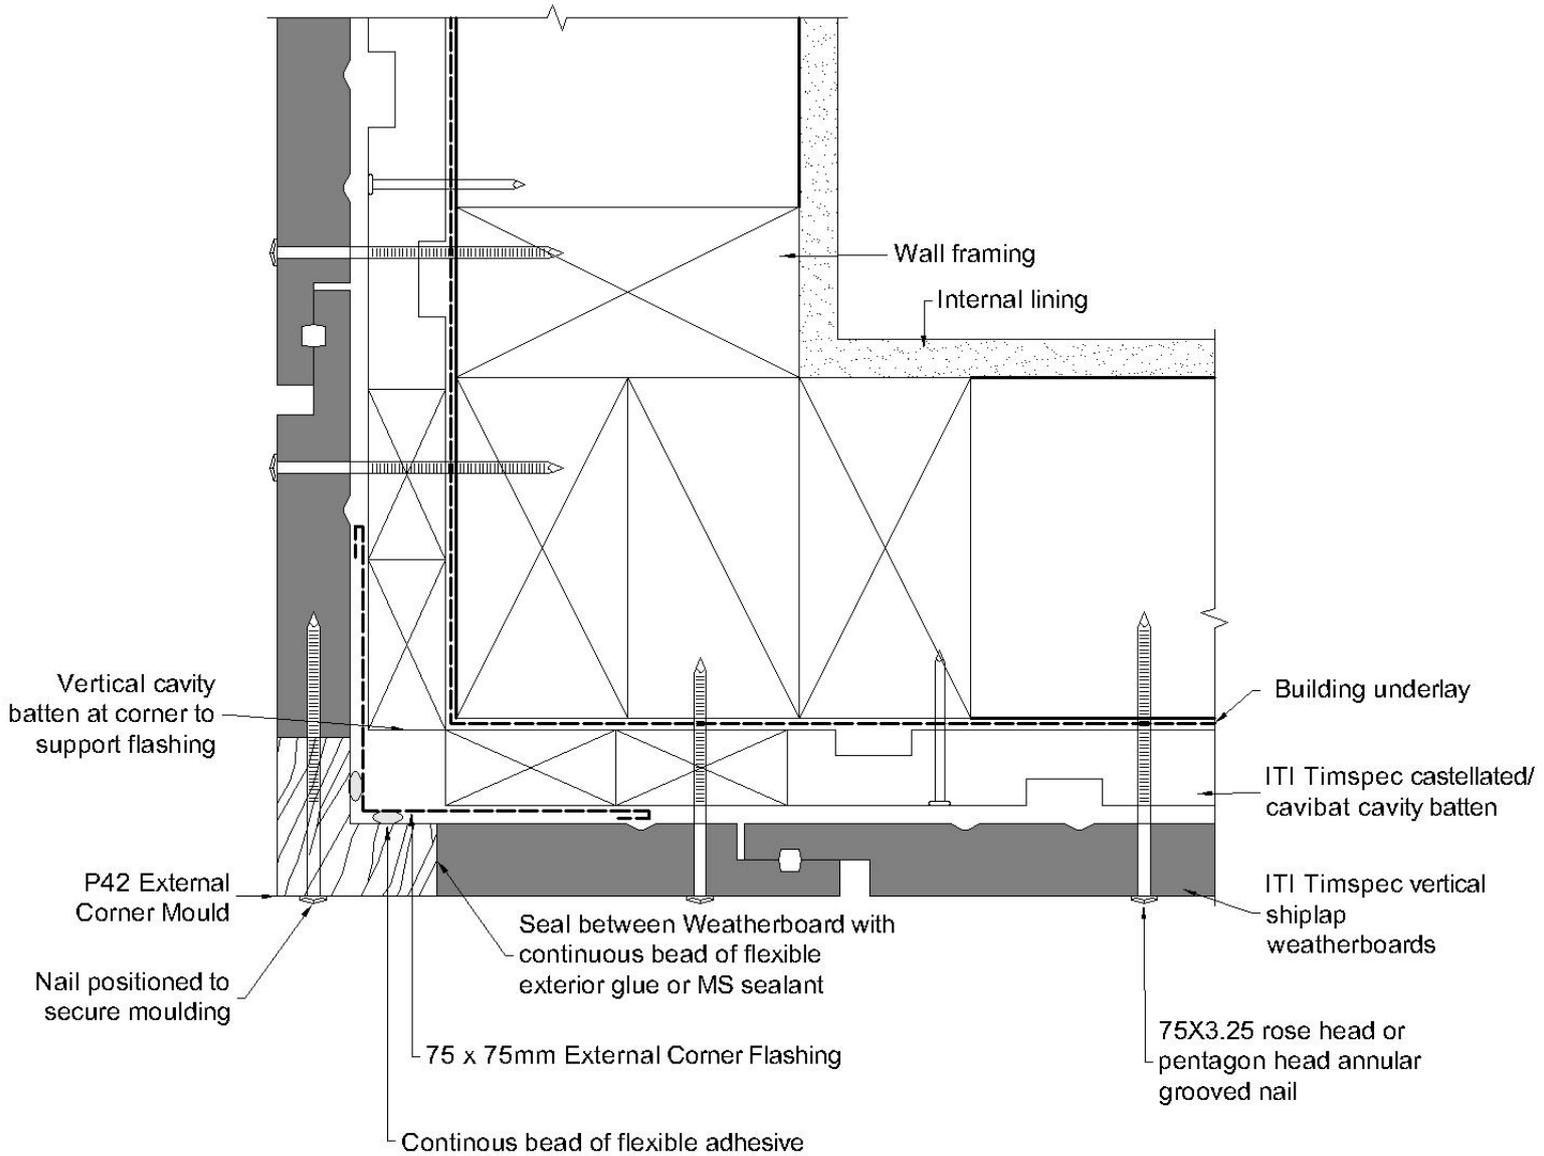


VC 404 External Corner – P42 Corner Moulding

Figure 13. 13 VC 405 External Corner – Notched & Lapped

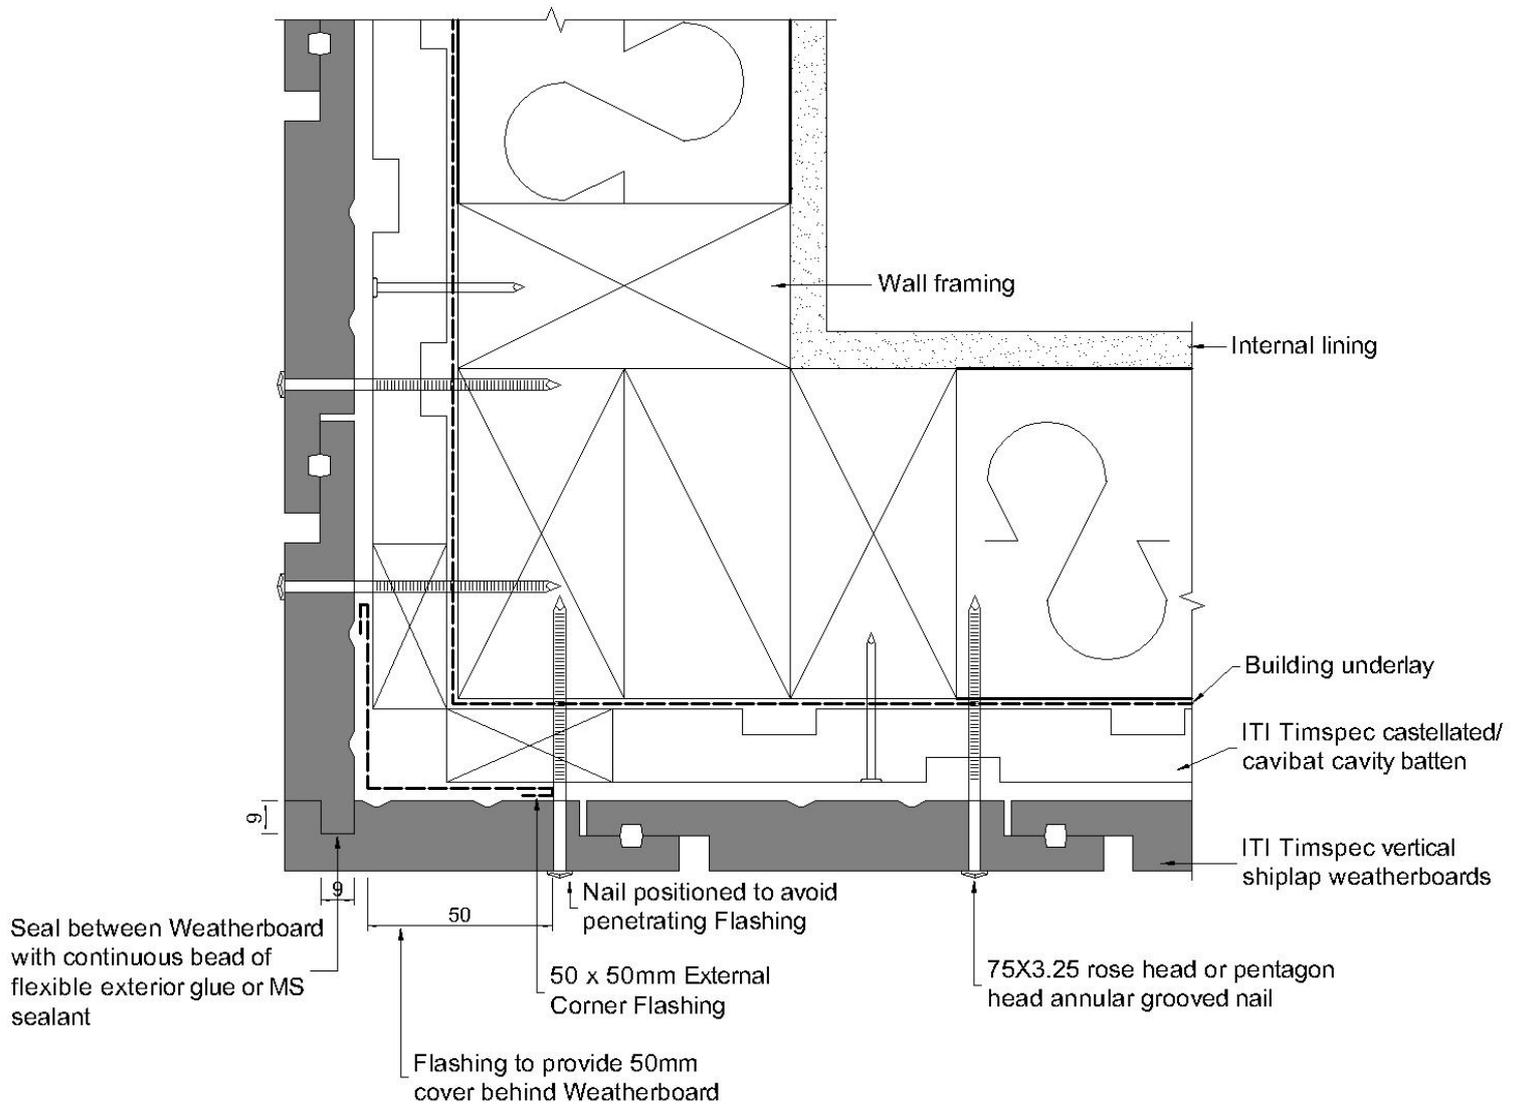


VC 405 External Corner – Notched & Lapped

Figure 13. 14 VC 406 External Corner – P40 Corner Moulding

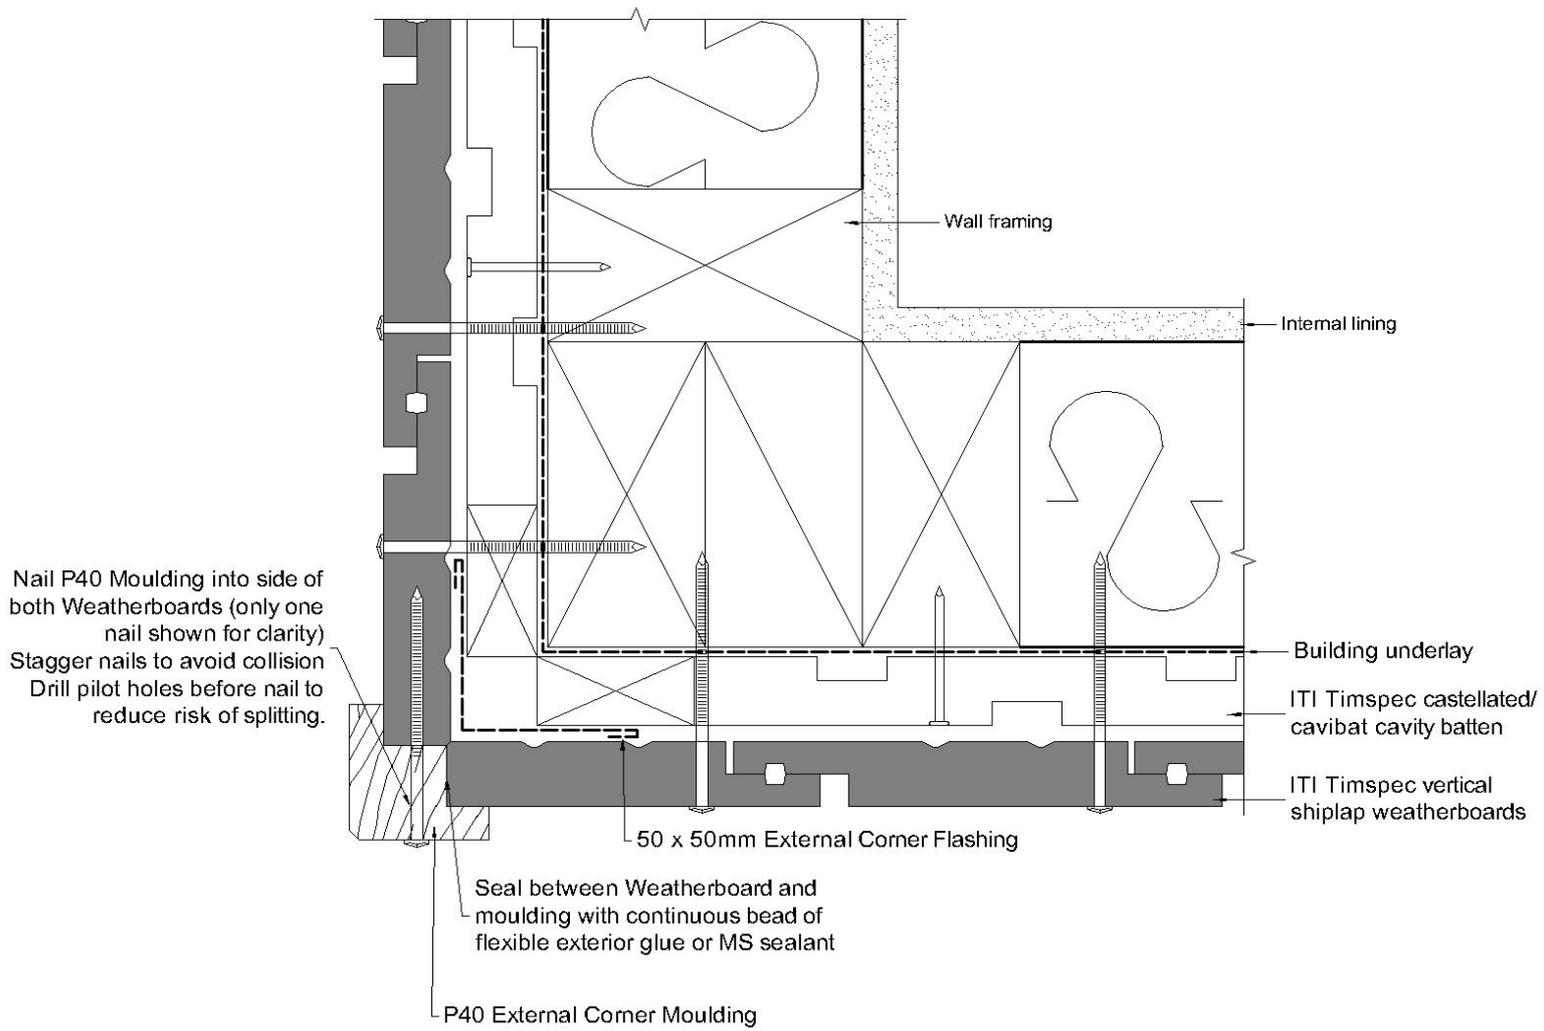


VC 406 External Corner – P40 Corner Moulding

Figure 13. 15 VC 501 Base, Concrete Slab on Ground

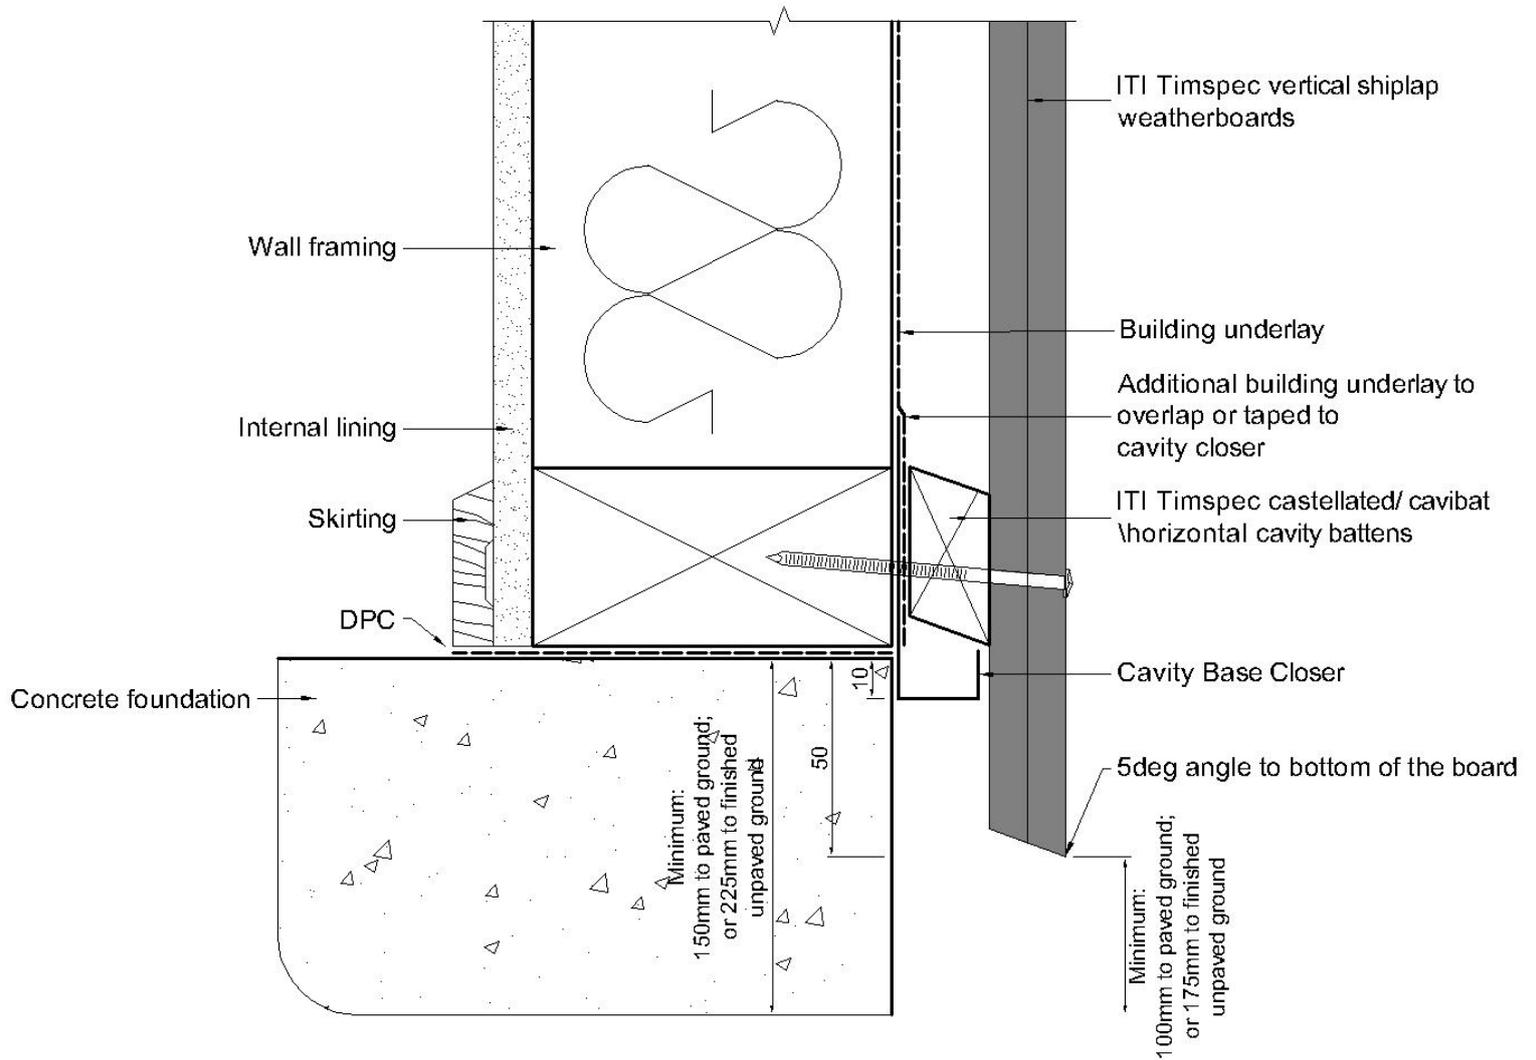


VC 501 Base, Concrete Slab on Ground

Figure 13. 16 VC 502 Base of Wall – Timber Floor

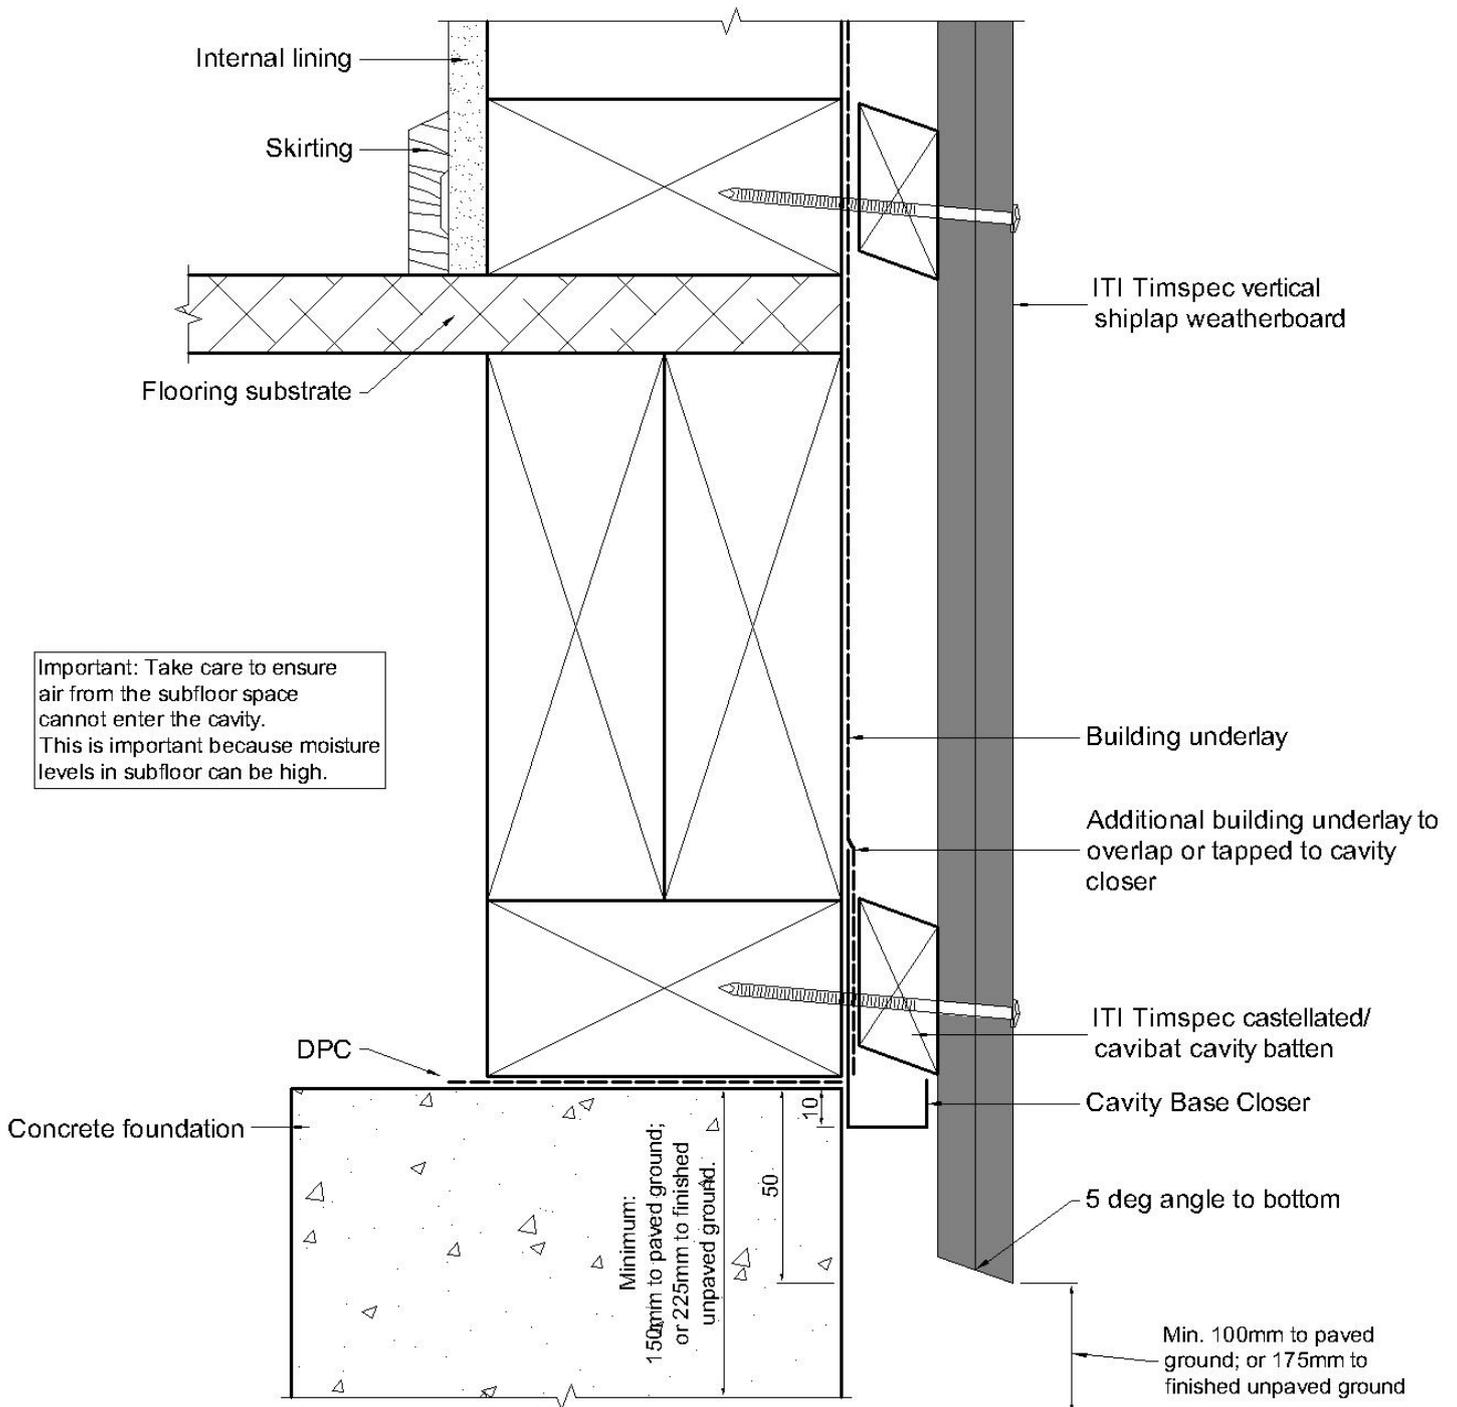


VC 502 Base of Wall – Timber Floor

Figure 13. 17 VC 503 Base, Cladding Finish Above Deck

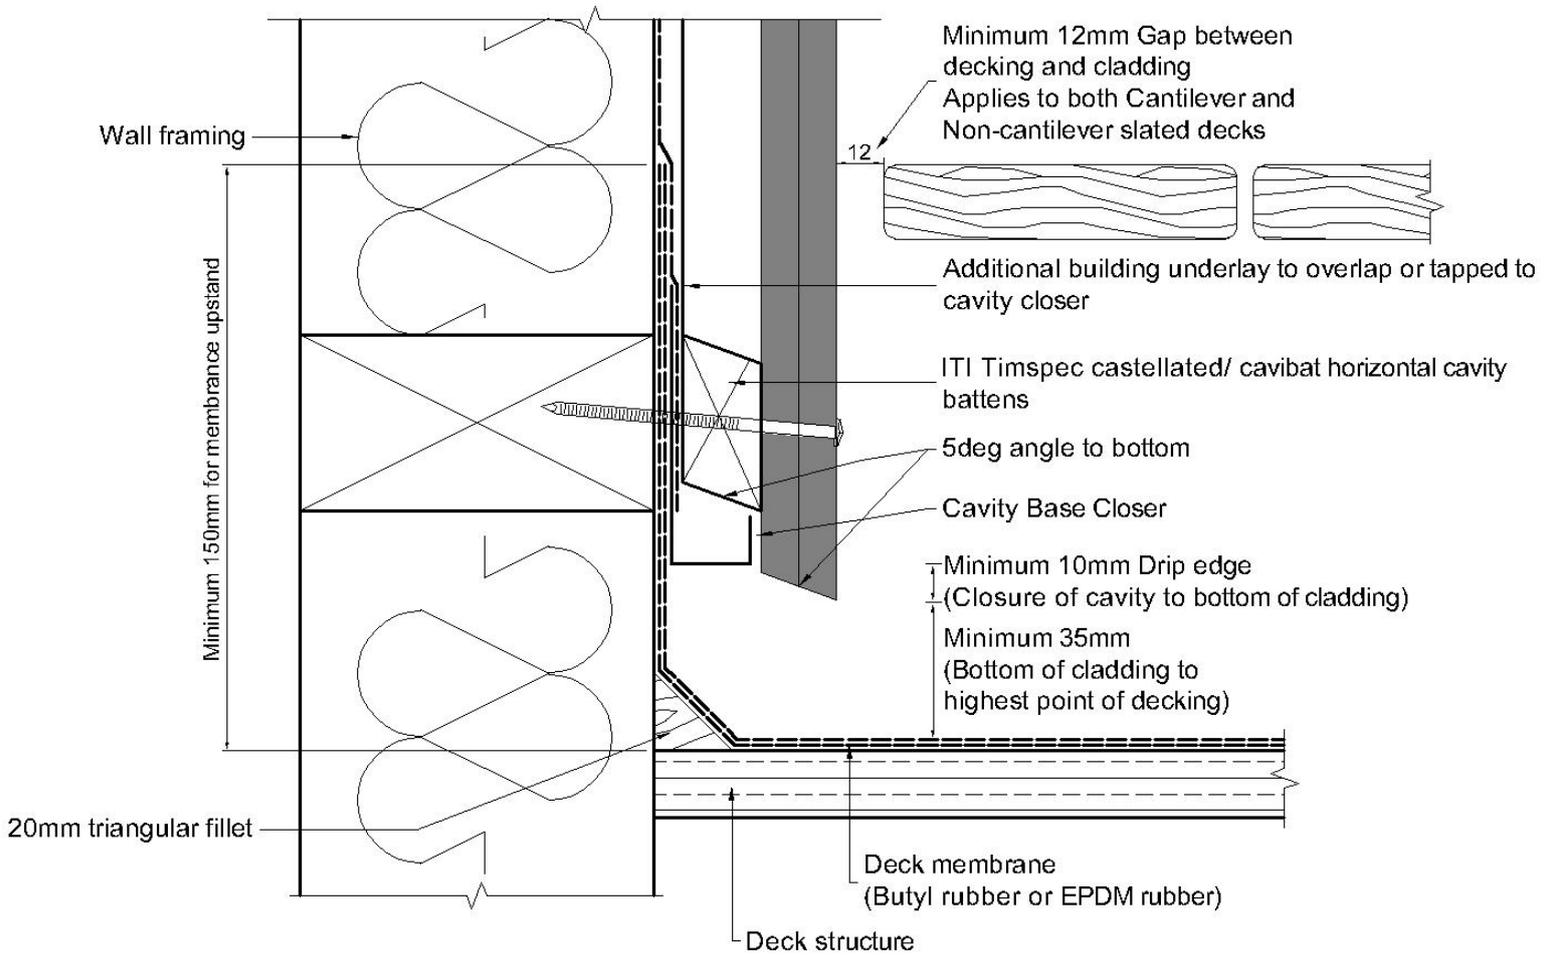


VC 503 Base, Cladding Finish Above Deck

Figure 13. 18 VC 601 Roof/ Wall Top Plate – Flat Soffit

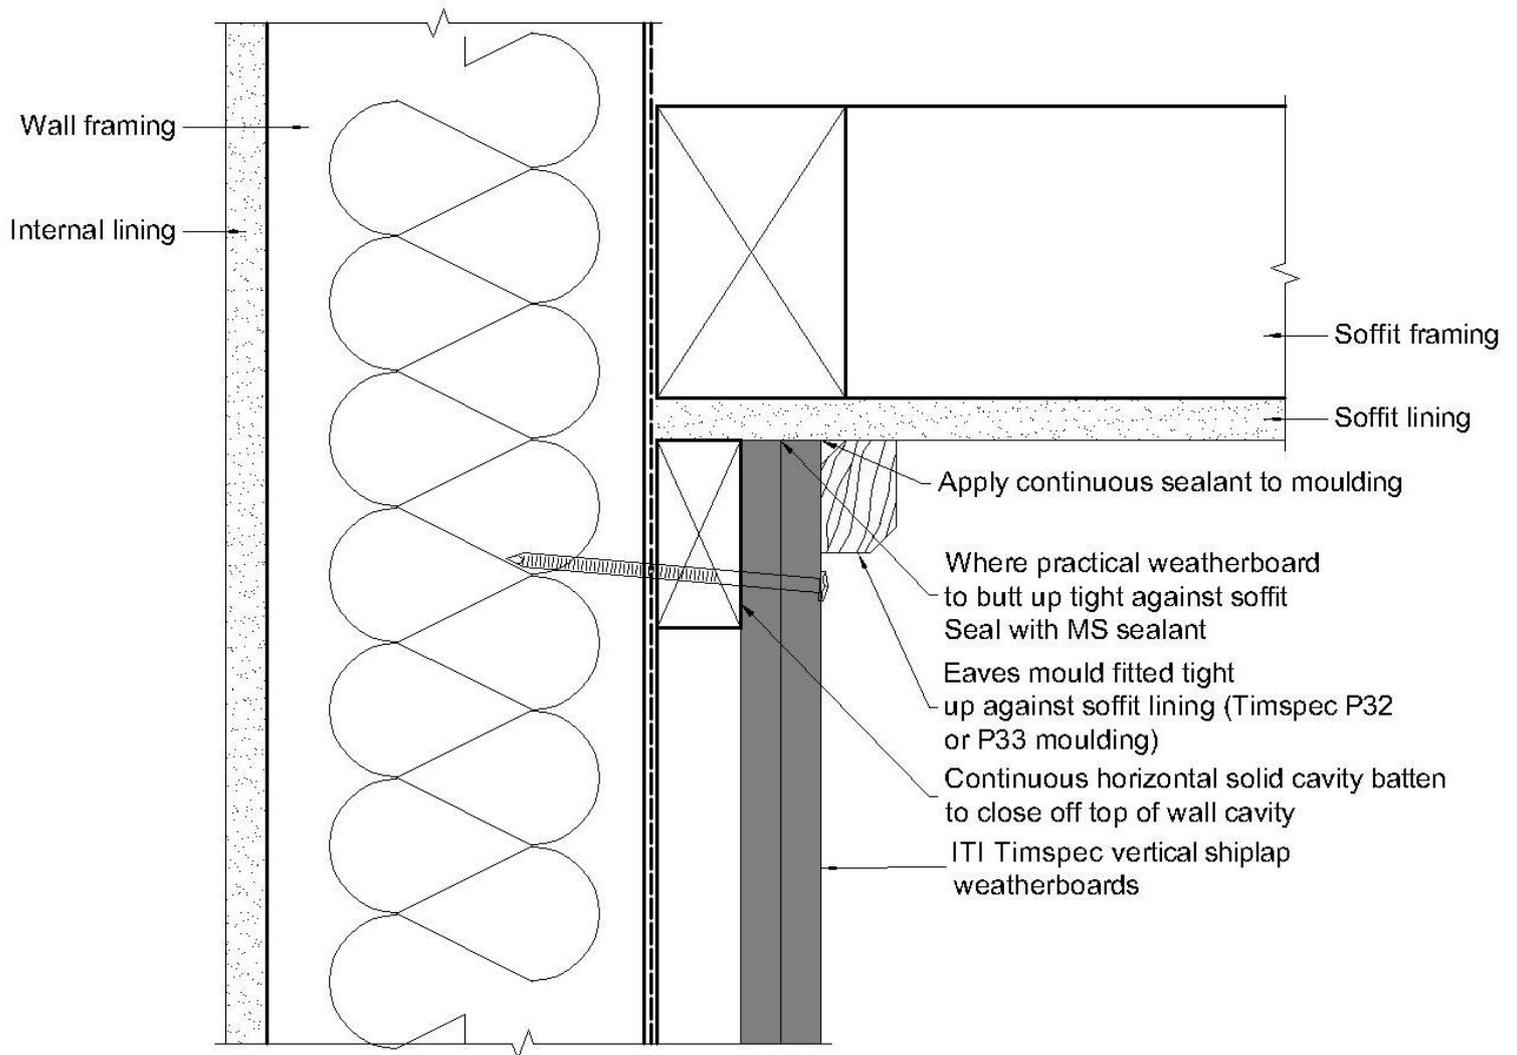


VC 601 Roof/ Wall Top Plate – Flat Soffit

Figure 13. 19 VC 602 Roof/ Wall Top Plate - No Soffit

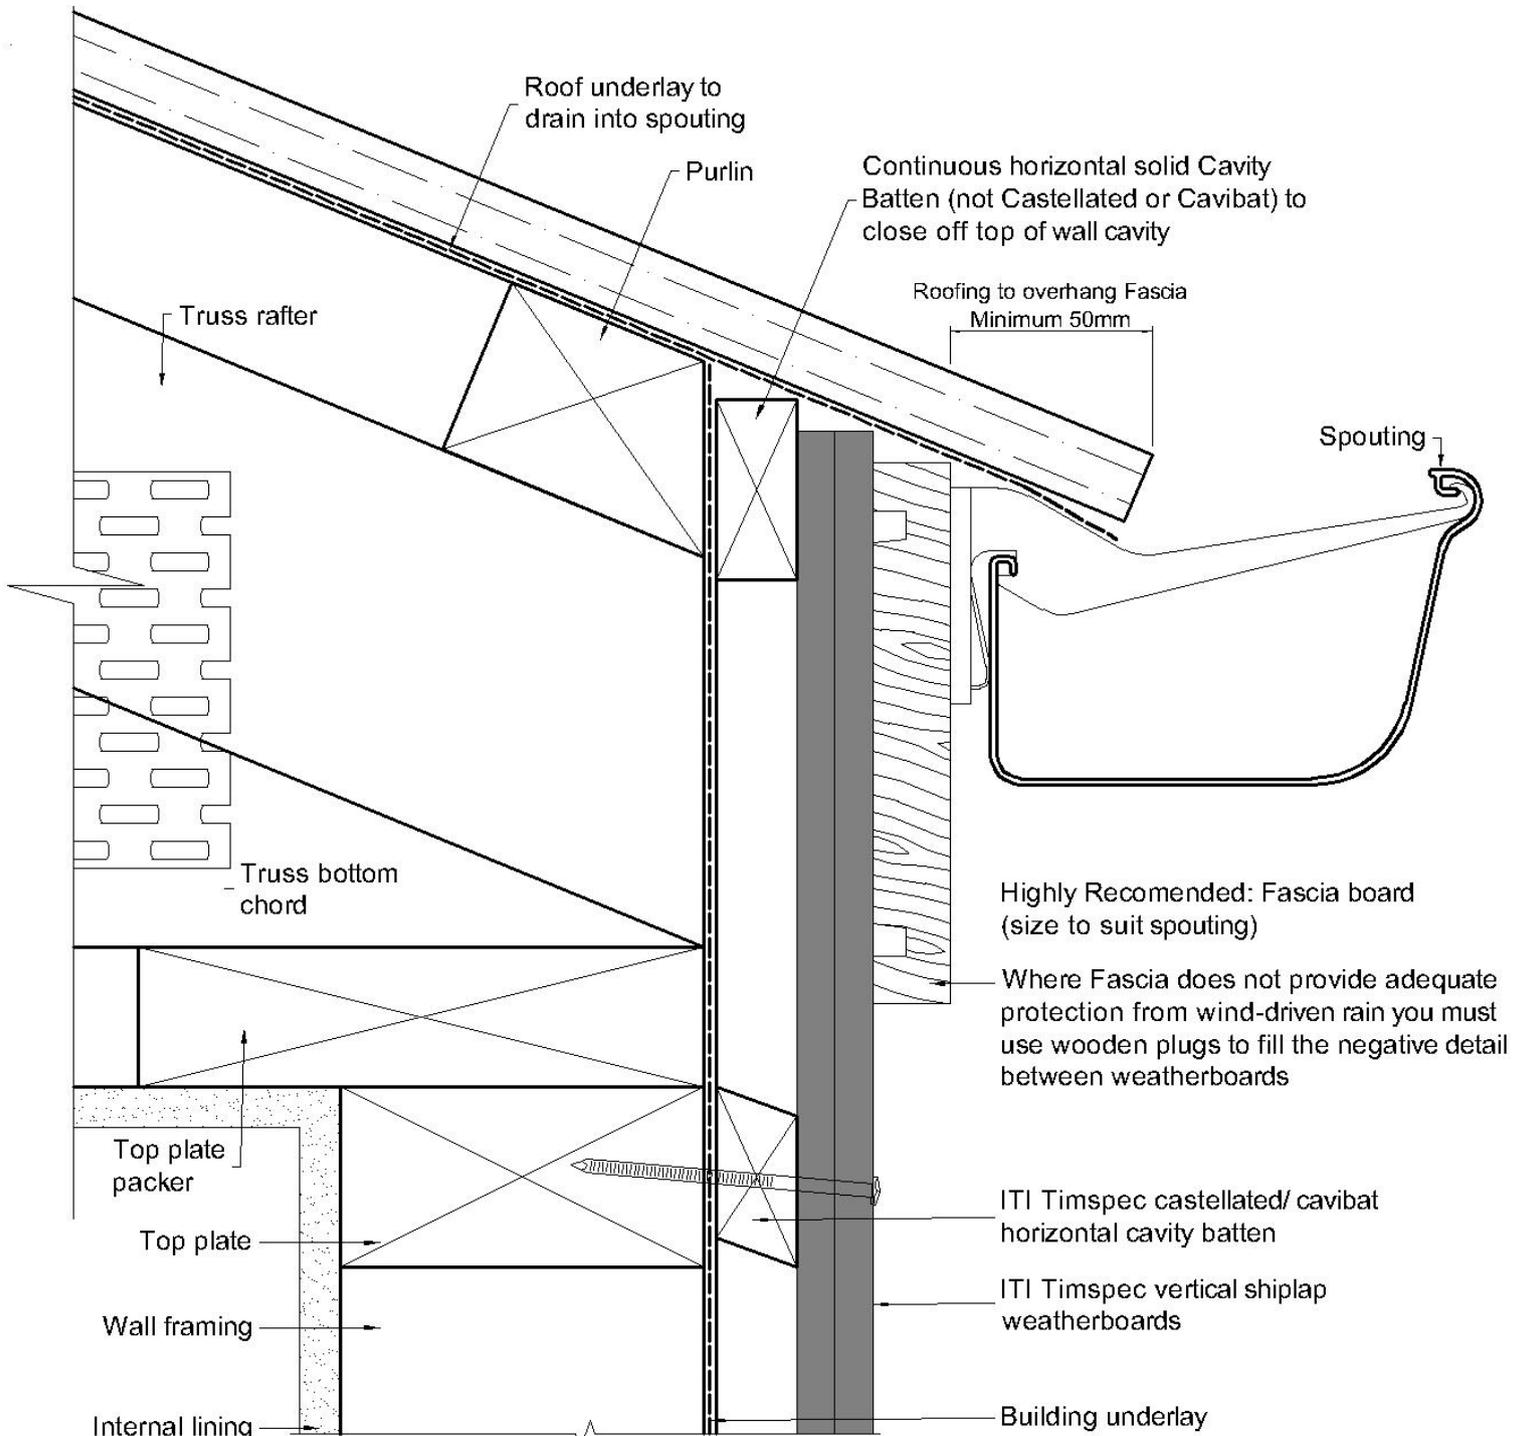


VC 602 Roof/ Wall Top Plate – No Soffit

Figure 13. 20 VC 701 Parapet Capping Expansion Joint

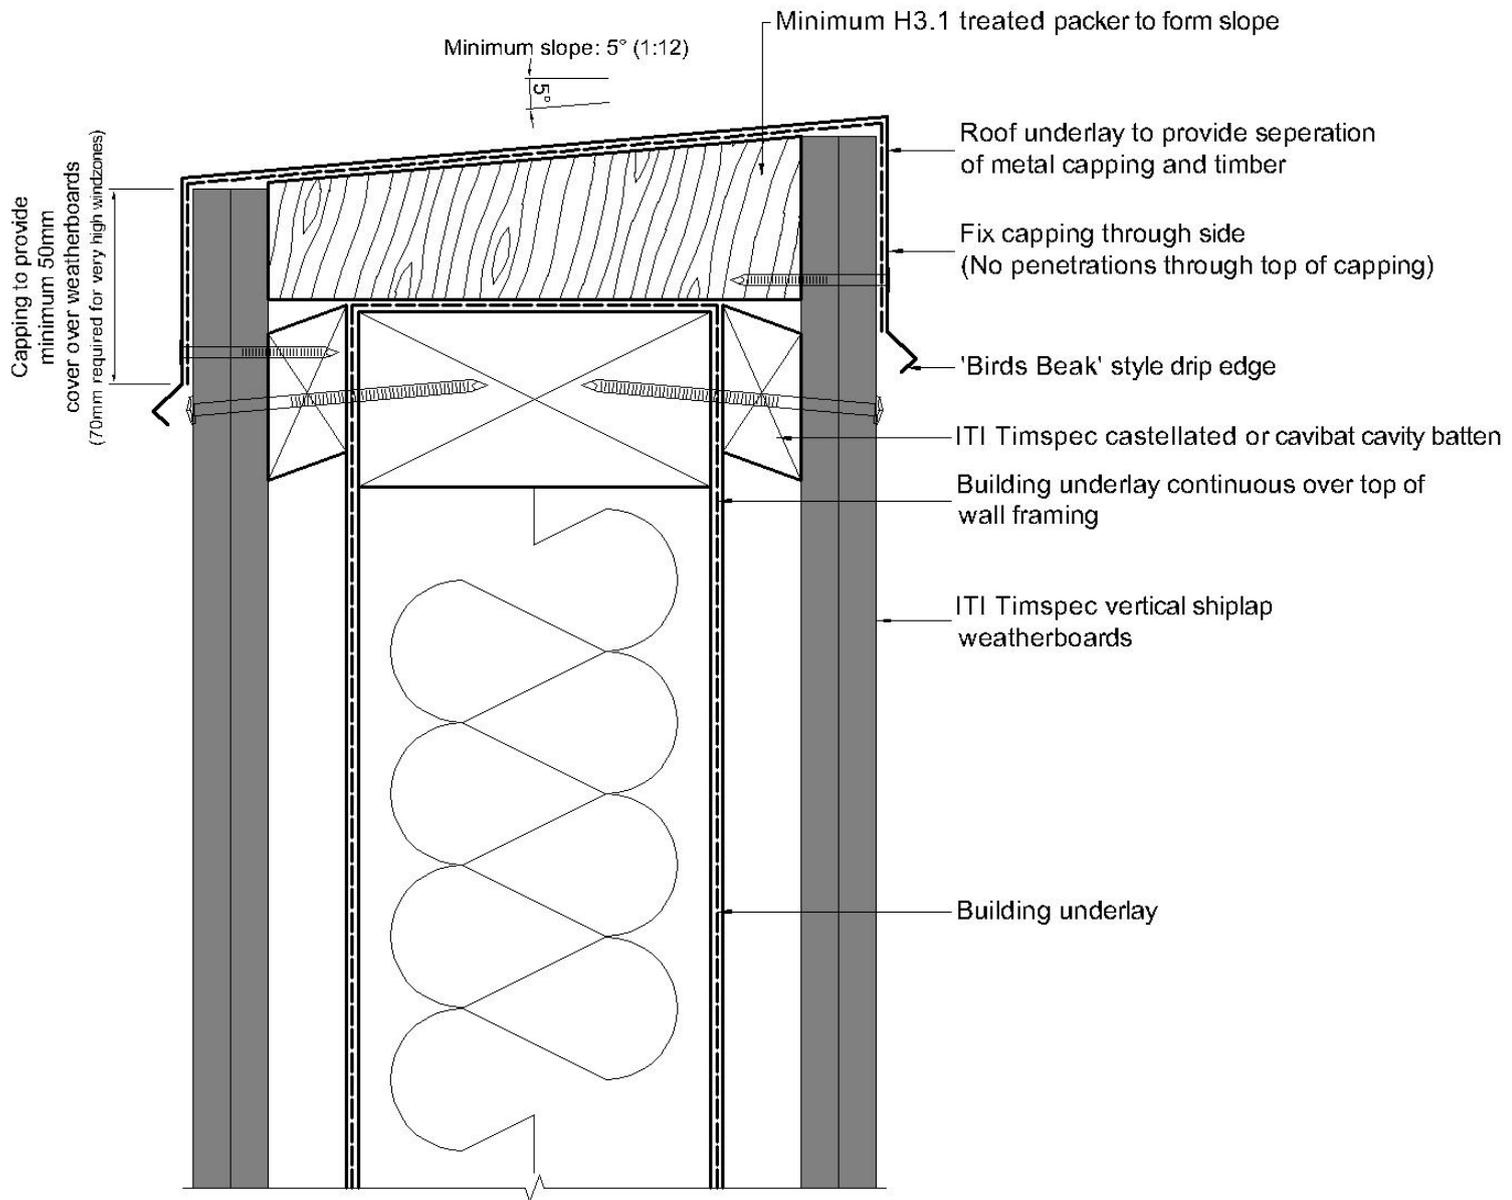


VC 701 Parapet Capping Expansion Joint

Figure 13. 21 VC 702 Balustrade, Intersection with Wall

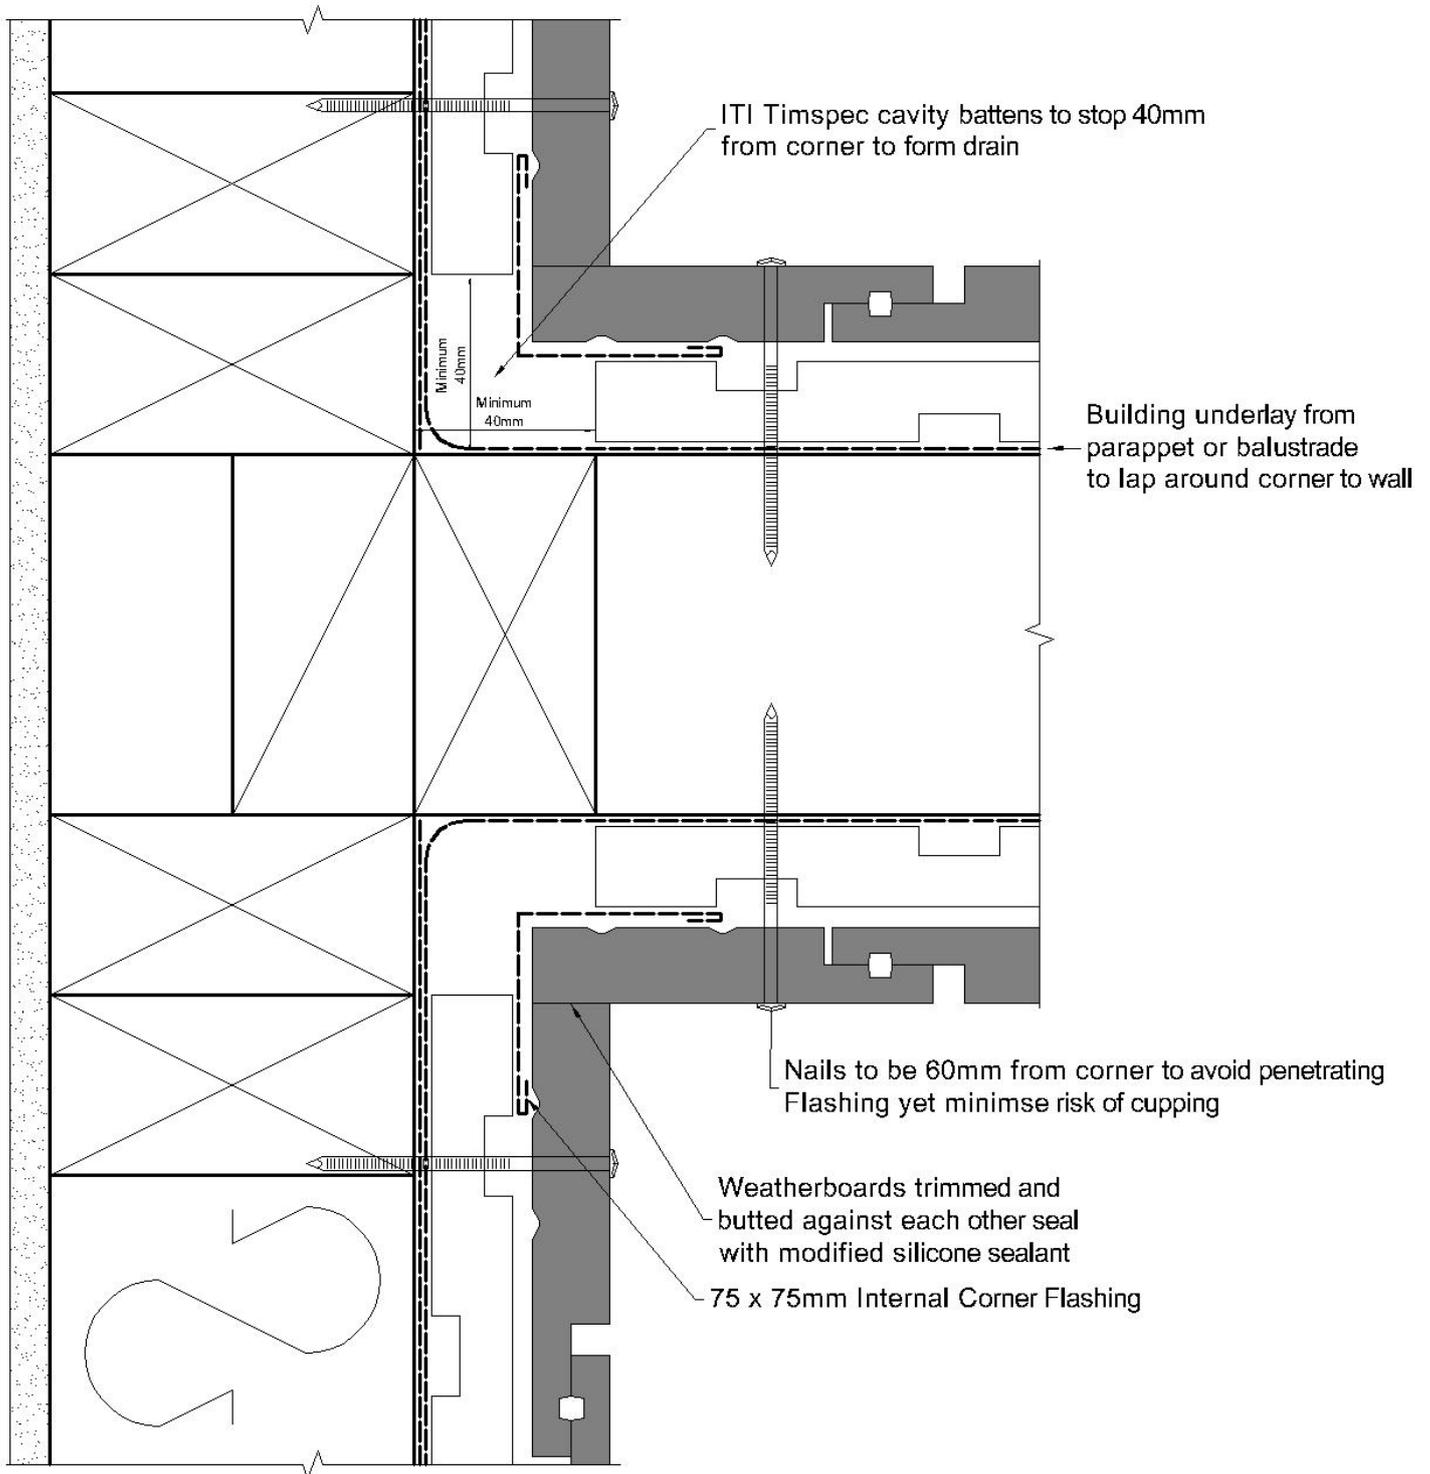


VC 702 Balustrade, Intersection with Wall

Figure 13. 22 VC 801 Meter Box Head

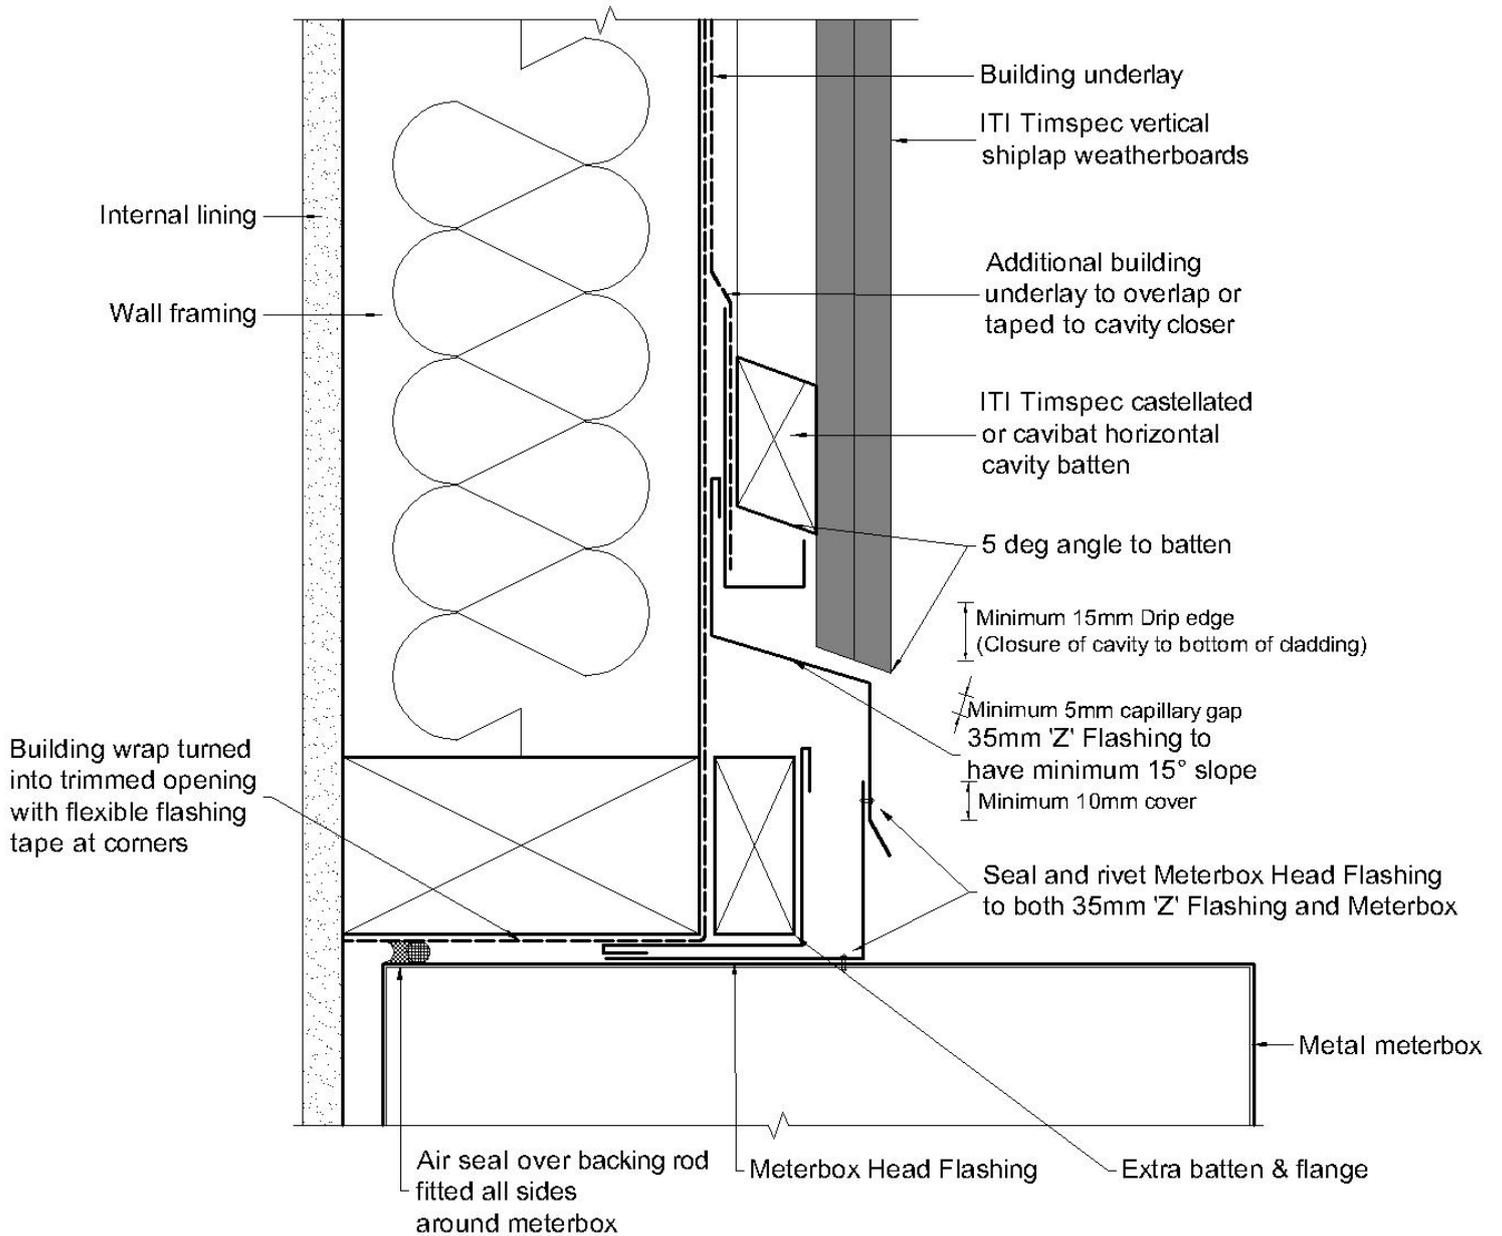


VC 801 Meter Box Head

Figure 13. 23 VC 802 Meter Box Jamb

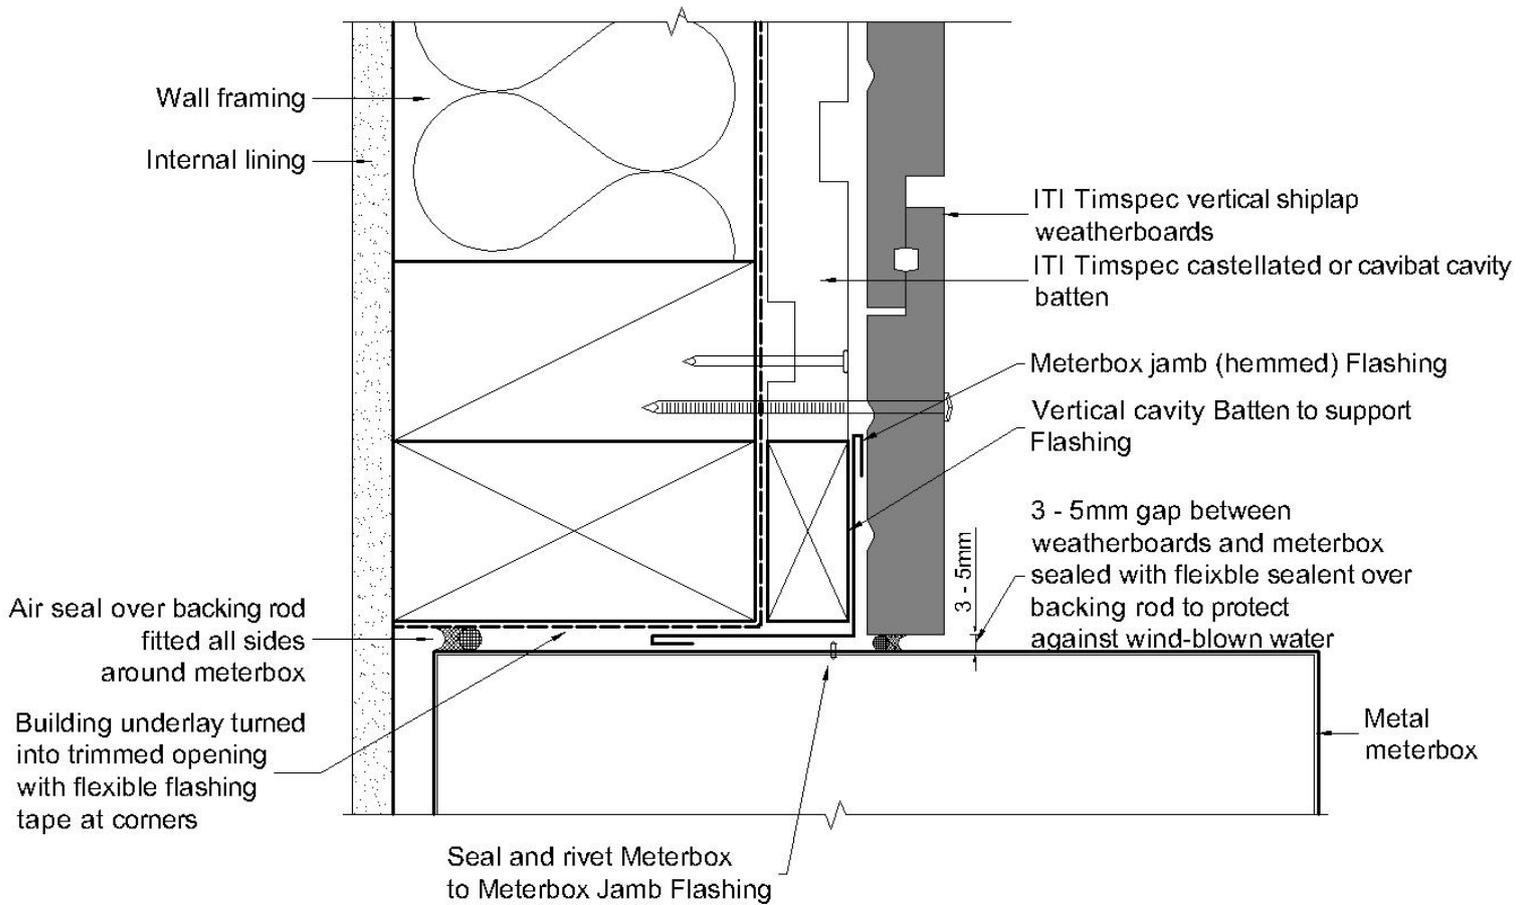


VC 802 Meter Box Jamb

Figure 13. 24 VC 803 Meter Box Sill

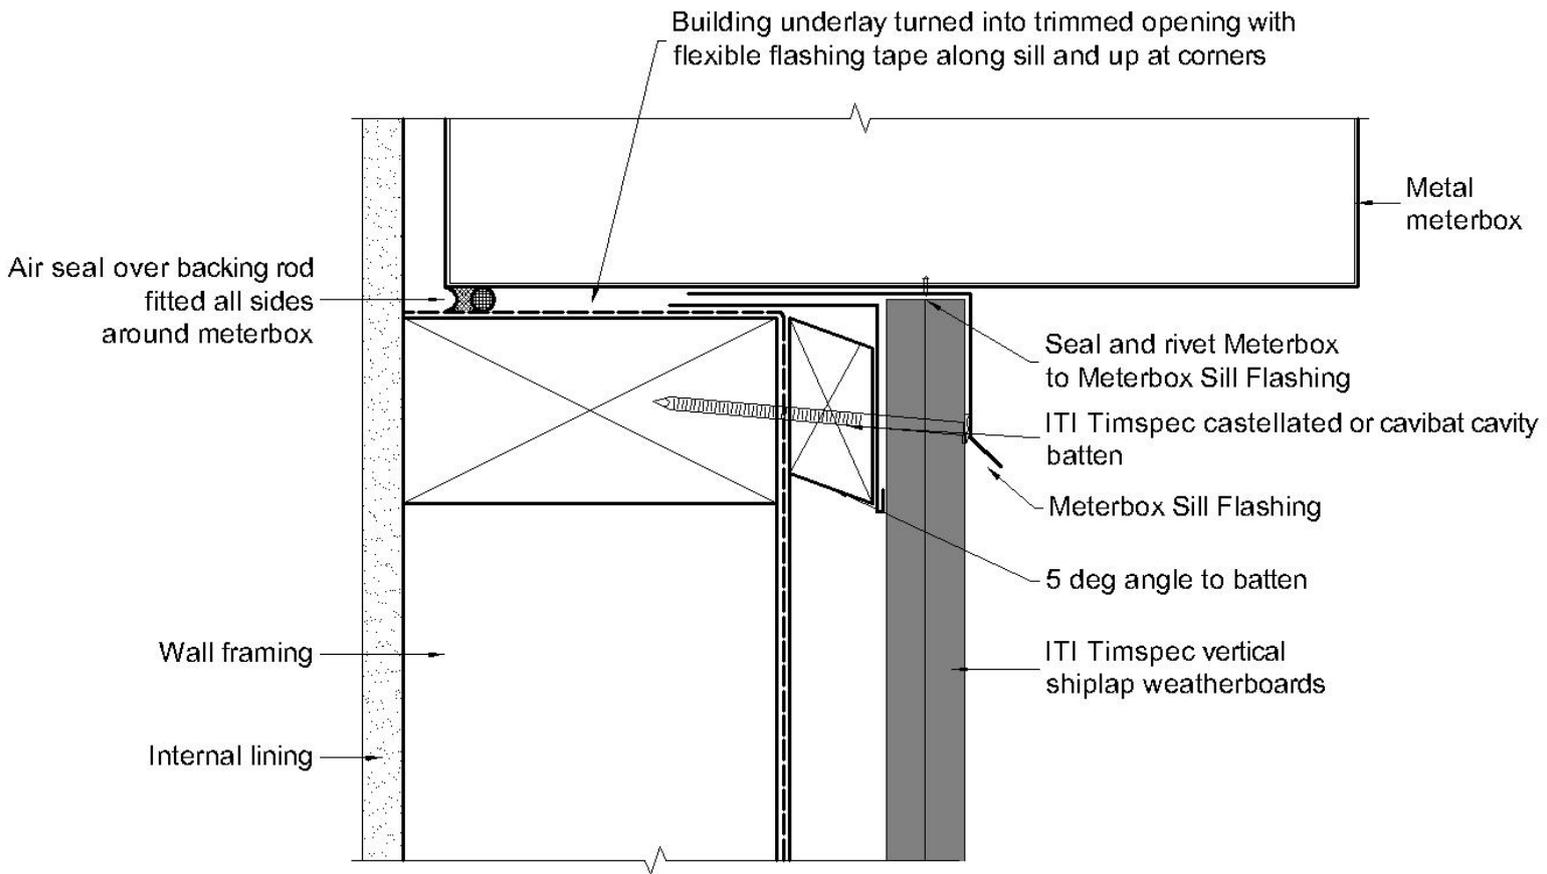

VC 803 Meter Box Sill

Figure 13. 25 VC 851 Pipe Penetration Detail

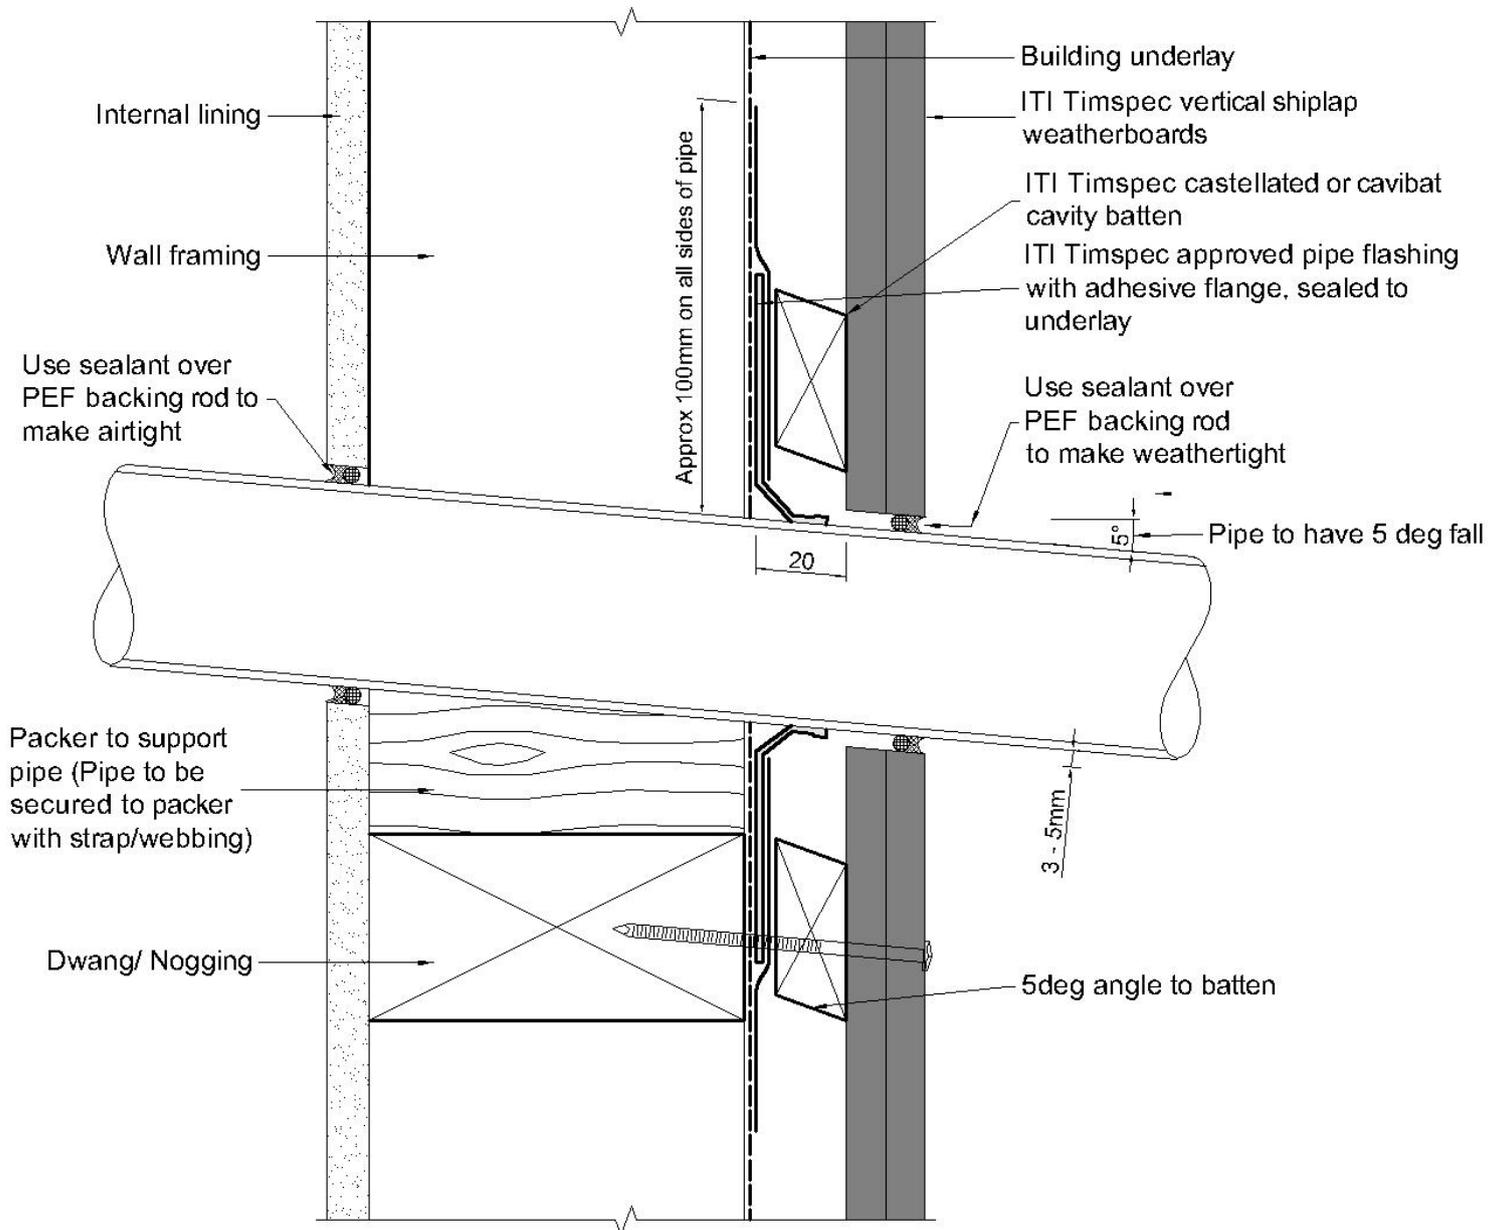

VC 851 Pipe Penetration Detail

14 CONTACT

AUCKLAND

For all North Island and/or Head Office enquiries and showroom

34 Keeling Road

Henderson 0612

Ph: (09) 620 0260 Fax: (09) 620 0261

Mon-Fri: 7.30am-5.00pm. Sat & Sun closed.

CARTERTON

For all lower North Island enquiries

30 Kent St, Carterton 5713.

PO Box 139, Carterton 5473.

Ph: ((09) 620 0260

Mon-Thu 7.30am-4.30pm. Fri 7.30am-11am. Sat & Sun closed.

CHRISTCHURCH

For all South Island related enquiries and showroom

14 Braeburn Drive, Hornby, Christchurch 8042,

PO Box 6387, Upper Riccarton, Christchurch 8442.

Ph: (03) 384 5287 Fax: (03) 384 5289

Mon-Fri 7.30am-5.00pm. Sat & Sun closed.

CONNECT WITH US ONLINE

To see product releases, special offers and newest projects. Visit: www.ititimspec.nz

Email: sales@ititimspec.co.nz or technical@ititimspec.co.nz